

Features & Functions Guide

KIA

SPORTAGE

WELCOME TO THE KIA FAMILY!

Your new Kia vehicle has been designed, engineered and manufactured to provide you with years of comfortable and dependable driving. Kia is committed to quality, innovation, safety and — above all — your satisfaction.

USING THIS FEATURES & FUNCTIONS GUIDE

The information contained in this guide is a brief overview of the operation and features of your new Kia vehicle.

This Features & Functions Guide and the specific operational and safety information it provides are not a substitute for your Owner's Manual. In the interest of your safety and that of the vehicle's occupants, and to help you avoid risks that may result in death or serious injury, Kia reminds you to carefully read the Owner's Manual in order to fully familiarize yourself with the important information and safety warnings it contains.

While Kia endeavors to ensure that the information contained in this guide is accurate at the time of printing, Kia may change vehicle specifications without notice in advance of or after the fact and assumes no liability in connection with such changes.

VIDEOS AND QR CODES

Kia provides a number of video resources to assist you with becoming familiar with the features and functions found in your Kia vehicle. You can access these resources by snapping the QR Codes with your mobile device using the built-in QR Code Reader or a downloaded QR Code Reader App.

After opening the QR Code Reader App on your mobile device, the app will utilize your device's camera. Center the code in the camera viewing area — with some apps, as soon as the app recognizes the code, it will launch the corresponding video.

With other apps, you will have to snap or "take a picture" of the code. The app will then launch the corresponding video.

For operation specifics, refer to the instructions that come with the QR Code Reader App. You can also view the videos by visiting the following website: www.youtube.com/KiaFeatureVideos

QUICK TIPS

If you're having trouble scanning codes, check the following:

- The code should be centered and focused in your mobile device's camera screen
- Consider moving your device closer to or farther away from the code
- The code should be well lit, without significant shadow
- Avoid scanning from a significant angle
- Confirm that the device's app supports 2D QR Code scanning
- Try another QR Code Reader App; not all apps are created equal

After scanning, you may experience a "connection error" message or a "connecting" message with no subsequent response. These messages typically indicate that your device is having trouble connecting to the Internet

QR CODES

Your New Kia Important Care Tips Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

GETTING STARTED

As you get to know your new Kia, you can explore this booklet to better understand how to operate its many features and systems. You can find the complete Table of Contents on the next two pages, but first, be sure to review the following to better understand some of your Kia's most used features:

- 1 Smart Key with Remote Start* 49
- 2 Fuel Filler Lid Release. 51
- 3 Power Adjustable Driver's Seat* / Front Seat Headrest Adjustment . . 47-48
- 4 Seat Warmers / Ventilated Seats* 46
- 5 Reclining/Folding Rear Seats 48
- 6 Front & Rear Windshield Wipers & Washers 29
- 7 Smart Cruise Control (SCC)* 18
- 8 Smart Power Liftgate* 55
- 9 Normal Maintenance Schedule Back Cover
- 10 User Settings* - Instrument Cluster 08
- 11 Vehicle Settings* - Infotainment System 09
- 12 Bluetooth® Wireless Technology 32-33
- 13 Kia Connect Activation* / Kia Connect Assistance* 36
- 14 Kia Connect with Smart Navigation* 38
- 15 Android Auto™ / Apple CarPlay® Setup. 34

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

www.kia.com
Consumer Affairs - Roadside Assistance¹²:
1-800-333-4KIA (800-333-4542)

Always check the Owner's Manual for complete operating information and safety warnings.

QR CODES

Your New Kia Important Care Tips Video



Navigation System Important Tips Video



Vehicle Cameras Important Tips Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

VIDEOS & QR CODES . . . Inside Front Cover

INSTRUMENT CLUSTER

Instrument Cluster Overview 03
 Indicators & Warning Lights 04
 Tire Pressure Monitoring System (TPMS) 05
 Fuel Economy 05
 Drive Mode Integrated Control System 06

VEHICLE SETTINGS

LCD Instrument Cluster Modes 07
 Trip Modes / Trip Computer 07
 Average/Instant Fuel Economy 07
 User Settings Mode* 08
 Service Interval Mode 08
 Vehicle Settings* - Infotainment System 09

ADVANCED DRIVER ASSISTANCE SYSTEMS (ADAS)

Blind-Spot Collision-Avoidance Assist (BCA)* 10
 Rear Cross-Traffic Collision-Avoidance Assist (RCCA) 11
 Lane Keeping Assist (LKA) 12
 Blind-Spot View Monitor (BVM)* 13
 Safe Exit Warning (SEW)* 13
 Lane Following Assist (LFA) 14
 Forward Collision-Avoidance Assist (FCA) 15
 Highway Driving Assist (HDA)* 16
 Forward/Reverse Parking Distance Warning (PDW)* 17
 Smart Cruise Control (SCC)* 18
 Cruise Control (CC) 19
 Navigation-based Smart Cruise Control - (NSCC)* 19
 Driver Attention Warning (DAW) 20
 Leading Vehicle Departure Alert (LVDA) 21
 Rear View Monitor (RVM) 22
 Surround View Monitor (SVM)* 23
 Reverse Parking Collision-Avoidance Assist (PCA)* 24

DRIVER'S PANEL

Instrument Cluster Illumination Control 25
 Electronic Stability Control (ESC) 25
 Hill-Start Assist Control (HAC) 25
 Power Liftgate Open/Close Button* 25
 Power Windows, Window Lock & Central Door Lock 26
 Manual Folding Mirrors* 26
 Automatic Door Lock/Unlock 26
 Power Outside Mirrors* 26
 Heated Outside Mirrors* 26
 Engine Start/Stop Button* 27

STEERING WHEEL CONTROLS

Headlights & High Beams 28
 High Beam Assist (HBA) 28
 Turn Signals & Fog Lights* 29
 Windshield Wipers & Washers 29
 Rear Wiper & Washer 29
 Tilt/Telescoping Steering Wheel 30
 Heated Steering Wheel* 30

INFOTAINMENT SYSTEMS

Audio Controls 31
Bluetooth® Wireless Technology 32
 Android Auto™ / Apple CarPlay® Setup 34
 Standard Audio System* 35
 Kia Connect Activation* / Kia Connect Assistance* 36
 Kia Access App Download 37
 Kia Access App Features Guide 37
 Kia Connect with Smart Navigation* 38

CENTER PANEL

Multimedia USB Port, Power Outlets & USB Charger Port 39
 Digital Clock 39
 Wireless Smartphone Charging System* 40
 Automatic Gear Shift with Sportmatic® Shifting 41

CENTER PANEL (CONTINUED)

Automatic Climate Control* 42
 Manual Climate Control* 43
 Electronic Parking Brake (EPB)* / Auto Hold* 44
 Downhill Brake Control 45
 AWD (All-Wheel Drive) Lock* 45
 Seat Warmers* / Ventilated Seats* 46

SEATING

Rear Occupant Alert (ROA) with Door Monitoring 46
 Power Adjustable Driver's Seat* 47
 6-Way Manual Adjustable Driver's Seat* 47
 Reclining/Folding Rear Seats 48
 Unfastening Center Seat Belt 48
 Front Seat Headrest Adjustment 48

OTHER KEY FEATURES

Smart Key with Remote Start 49
 Remote Keyless Entry (Folding Key)* 50
 Double-Turn Lock/Unlock All 50
 Fuel Cap / Malfunction Indicator 51
 Fuel Filler Lid Release 51
 HomeLink® with Auto-Dimming Rearview Mirror* 52
 Power Liftgate* 54
 Smart Power Liftgate* 55
 Manual Liftgate / Liftgate Release Button 55
 Map/Room Lamps 56
 Panoramic Sunroof with Power Sunshade* 56
 Sunvisor / Hood Release Lever and Latch 57
 Tire Mobility Kit 58


SAFETY FEATURES

 
Seat Belts 59
 Child-Protector Rear Door Lock 59
 Occupant Detection System (ODS) / Passenger Airbag Off Indicator 59

MAINTENANCE SCHEDULE Back Cover

LEGAL DISCLAIMERS Inside Back Cover

Instrument Cluster Overview

- A** Tachometer
 - B** Turn Signal Indicators
 - C** Speedometer
 - D** Engine Coolant Temperature Gauge
 - E** Indicator & Warning Lights
 - F** Gear Shift Position, Range, Trip Modes
 - G** Outside Temperature, Odometer
 - H** Fuel Gauge
-  Arrow direction indicates the side of the vehicle the fuel door is located

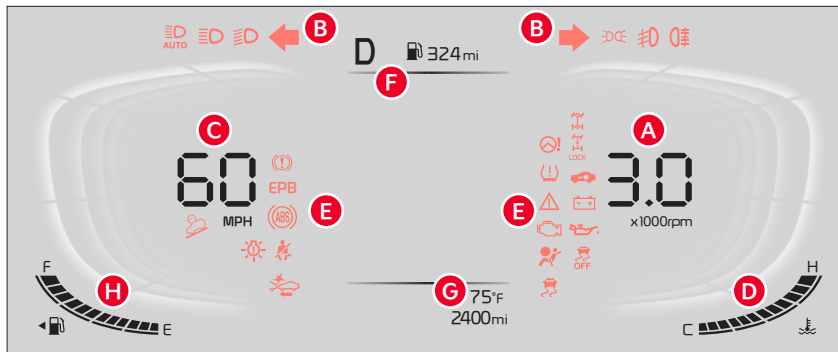

(Conventional Type A Cluster)

QR CODE

Instrument Cluster's LCD Display Video



 
Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.

Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations.

For more information on the instrument cluster and the function of all indicator and warning lights, please refer to section 2 in the Owner's Manual.

Indicators & Warning Lights

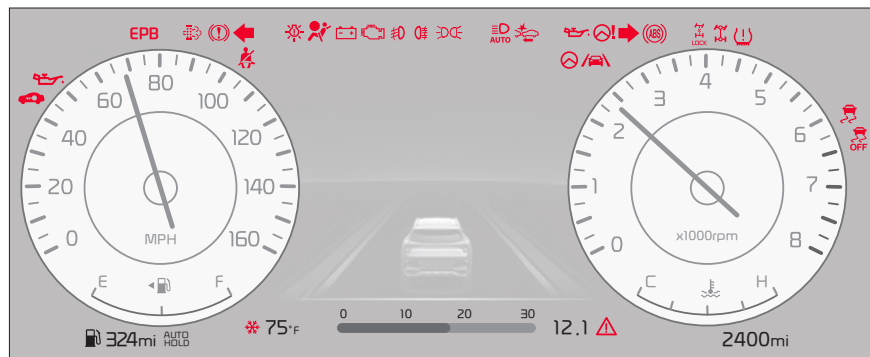

(Full LCD Type B Cluster)



This illustration is for demonstration purposes only. Some indicators and warning lights may not appear in illustration. On the vehicle, they may appear in the LCD.


Your vehicle's instrument cluster & indicator light locations may differ from those in the illustrations.


For more information on the instrument cluster and the function of all indicator and warning lights, please refer to section 2 in the Owner's Manual.


- | | | | | | |
|--|---|--|--|--|--|
| | Turn Signal Indicator Lights | | Lane Safety Indicator Light | | Low Tire Pressure Light / Tire Pressure Monitoring System (TPMS) Malfunction Indicator |
| | Low Engine Oil Level Warning Light | | Electric Power Steering (EPS) Warning Indicator | | Anti-lock Braking System (ABS) Warning Light |
| | ECO Indicator Light | | Charging System Warning Light | | Electronic Stability Control (ESC) Indicator Light |
| | Sport Mode Indicator Light* | | Engine Oil Pressure Warning Light | | Electronic Stability Control (ESC) OFF Indicator Light |
| | High Beam Assist Indicator Light* | | Parking Brake & Brake Fluid Warning Light | | All Wheel Drive (AWD) Warning Light* |
| | High Beam Indicator Light | | Seat Belt Warning Light | | AWD LOCK Indicator Light* |
| | Light ON Indicator Light | | Airbag Warning Light | | Low Fuel Level Warning Light |
| | Front Fog Light Indicator* | | Malfunction Indicator Light | | Auto Hold Indicator Light* |
| | Master Warning Light* | | Cruise Indicator Light* | | Icy Road Warning Indicator Light* |
| | Electric Parking Brake (EPB) Warning Light* | | Electronic Brakeforce Distribution (EBD) System Warning Light (Two separate indicators on Instrument Cluster lit at same time) | | Immobilizer Indicator Light* |
| | Cruise Control SET Indicator* | | Downhill Brake Control (DBC) Indicator Light | | LED Headlamp Warning Light* |
| | Forward Safety Warning Light | | | | |

Tire Pressure Monitoring System (TPMS)


 The TPMS indicator  functions as both Low Tire Pressure Light and TPMS Malfunction Indicator.


The indicator  will illuminate if it detects one or more tires is significantly underinflated, the vehicle has a spare tire installed without TPMS or the outside temperature becomes significantly lower.

 Inflate tire(s) to specifications using an accurate digital tire pressure gauge to turn off Low Tire Pressure Indicator . See front driver's door jamb for PSI specification. The Low Tire Pressure Position

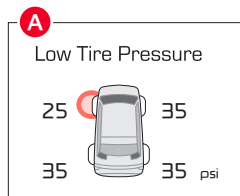

The above images are for illustrative purposes only and may not reflect actual display

Indicator  is displayed on the LCD screen in the Instrument Cluster when the tire(s) is underinflated.

When there is a problem with the TPMS, the TPMS Malfunction Indicator  will blink for approximately one minute and then illuminate. See dealer for service.

Refer to section 6 in the Owner's Manual for more information.

QUICK TIPS

- Even with TPMS, tire pressure should be checked manually at least once a month. Only adjust tire pressure on "cold tires" that have been sitting for 3 hours or more, and tires that are not hot in temperature from direct sunlight or heat
- For proper maintenance and optimal fuel economy, maintain recommended tire inflation pressures and stay within the load limits and weight distribution recommended for your vehicle
- In winter or cold weather, the TPMS light may illuminate if the tire pressure was adjusted to the recommended tire inflation pressure during warm weather

REMINDERS:

- Check the recommended tire pressure label located on the left side of driver's door jamb, visible when the door is opened
- Consult your dealer for service if Low Tire Pressure Light remains illuminated after inflating your tire(s)
- Personal electronic devices (such as laptops, wireless chargers, remote start systems, etc.) may interfere with the TPMS system, which may cause the Malfunction Warning Indicator (Check Engine Light) to illuminate

QR CODE

Tire Pressure Monitoring System Video



Tips for Economical Driving Video



*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*

Fuel Economy / Tips for Economical Driving

There are several factors that contribute to your vehicle's fuel economy, such as maintenance of your vehicle, driving style, environmental conditions, vehicle weight and vehicle aerodynamics. Below are some tips on how to help improve fuel economy:

- Use the climate control system less often. Use the Driver Only* setting
- Keep your vehicle in good condition with regular maintenance
- Don't let the engine idle longer than necessary
- Drive at a moderate speed, accelerating smoothly and at a moderate rate
- Keep tires inflated to the recommended pressure
- Travel lightly, without carrying unnecessary weight in your vehicles
- Avoid placing large or heavy items on roof racks
- Avoid hilly, winding or poorly maintained roads

Refer to section 4 in the Owner's Manual for more information or snap the QR Code above to view a video.

Drive Mode Integrated Control System

The Drive Mode may be selected based on the driver's preferences and road conditions.

To cycle through the different Drive Modes **A**, rotate the DRIVE MODE dial **B**. The instrument cluster LCD will display SPORT, SMART or SNOW* mode when selected. When in NORMAL mode, it will not display in the instrument cluster.



- **NORMAL** - This mode balances drivability and efficiency. Normal mode automatically changes the vehicle to 2WD or AWD* depending on the road conditions
- **SPORT** - This mode provides enhanced acceleration and dynamic drivability. The electric energy efficiency may decrease in this mode
- **SMART** - When the SMART mode is activated, the system automatically selects the drive mode best suited to the current driving style (economic, average, spirited). The color of the SMART mode indicator (green, white, red) depends on the current driving style
- **SNOW*** - Press and hold the DRIVE MODE button to enter Snow Mode. Snow mode automatically changes the vehicle to 2WD or AWD depending on the road conditions

REMINDERS:

- Steering effort may be slightly increased in Sport mode
- When SPORT mode is selected, fuel economy may decrease

Image is for illustrative purposes only and may not reflect actual feature or operation. Your vehicle's buttons may differ from those in the illustrations.

  Refer to section 5 in the Owner's Manual for more information.

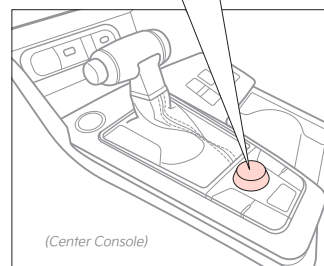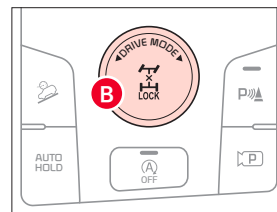

(Type B shown. Located below gear shift)

QR CODE


Drive Mode Integrated Control Video





Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos


LCD Instrument Cluster Modes


Press the LCD Mode button  **A** to cycle through different LCD Instrument Cluster Modes:

 **Driving Assist:** Displays information for Forward Collision-Avoidance Assist, Lane Keeping Assist, Blind-Spot Collision-Avoidance Assist*, Smart Cruise Control*, Lane Following Assist, Driver Attention Warning

 **Trip Computer Mode:** Displays driving information for fuel economy, accumulated info, AUTO STOP* etc.

 **Turn-by-Turn Mode*:** Displays information for the route guidance and destination

 **User Settings* Mode:** Change settings of the Driver Assistance cluster, doors, lights, convenience, units, and other features


 **Information/Master Warning Mode:** Informs of Drive Force Distribution and warning messages related to the vehicle, TPMS*, Driver Assist systems



Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.


Refer to section 4 in the Owner's Manual for more information.

Trip Modes / Trip Computer

The Trip Computer is a driver information system that displays information related to driving. It appears on the display when the ignition switch or the Engine Start/Stop button is in the ON position.

To cycle through the different LCD Instrument Cluster modes, press the LCD Mode button  **A**.

When in Trip Computer mode  , press the OK button  **B** up/down to cycle through the screens.

When displaying trip information or the fuel economy screens, press and hold the OK button  **B** to reset the Tripmeter to zero.

REMINDERS:

- Appearance of Tripmeter display may differ, as equipped
- All stored driving information (except Odometer and Range) is reset if the battery is disconnected

 
Your vehicle's steering wheel buttons may differ from those in the illustrations.

Refer to section 4 in the Owner's Manual for more information.


Average / Instant Fuel Economy

This information is always displayed at the bottom center of the Instrument Cluster LCD. The average fuel economy is calculated by the total driving distance and fuel consumption, since the last reset. Instant fuel economy displays the fuel economy during the last few seconds, when the vehicle speed is faster than approximately 6 mph.

REMANDER: If the vehicle speed exceeds 6.2 mph after being refueled with more than 1.6 gallons, the average fuel economy will be cleared to zero (----)

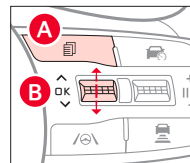

 (Type A; Controls located on Steering Wheel)

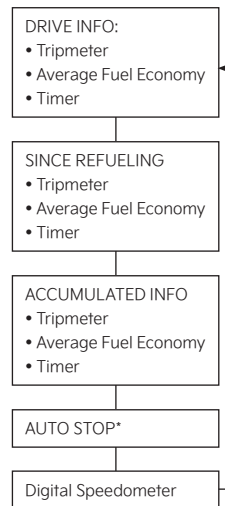

(Type B Cluster)

QR CODE

Instrument Cluster's LCD Display Video



Steering Wheel Controls Video



*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*

Refer to section 4 in the Owner's Manual for more information.

User Settings Mode*

To enter the User Settings mode in the LCD Instrument Cluster Modes, ensure vehicle is at a stand still, shift lever is in Park, and the Engine Start/Stop button or Key is in the ON position, and press the LCD Mode button **A** and press the OK button to enter.

You can navigate the selections on the display by pressing the OK button **B** up or down. Select the item by pressing the OK button **B**.

User Settings Modes:

Driving Assistance

- Driving Convenience
- Speed Limit*
- Warning Timing
- Warning Volume
- Driver Attention Warning
- Forward Safety
- Lane Safety
- Blind-Spot Safety
- Parking Safety

Cluster

- Theme selection
- Wiper/Lights display
- Traffic Signs
- Icy road warning
- Cluster voice guidance volume
- Welcome sound

Lights

- Illumination
- One-Touch turn signal
- Ambient light brightness
- Headlamp delay
- High Beam Assist

Some settings in certain models may be available through the audio head unit screen. Refer to section 4 in the Owner's Manual for more information.

Door/Liftgate

- Automatically Lock / Unlock
- Two-Press Unlock
- Horn feedback
- Power Liftgate
- Power Liftgate Opening Speed
- Power Liftgate Opening Height
- Smart Liftgate

Convenience

- Seat Easy Access
- Rear Occupant Alert
- Welcome light
- Welcome Mirror/Light
- Wireless Charging System
- Auto Rear Wiper (in Reverse)
- Oil Change Reminder

Units

- Speedometer unit
- Fuel economy unit
- Temperature unit
- Tire pressure unit

Language

 
- Choose the language

Reset:

- All menus in the User Settings mode are reset back to factory settings, except language and service interval

Service Interval Mode

To enter Service Interval Mode, press the LCD Mode button **A** and cycle to User Settings mode, then Service Interval Mode. Then press the OK button **B** to enter. System will display tire pressure status, number of miles remaining until next service is due, as well as the type of service due.

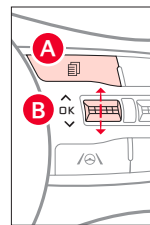

(Type A)

When service is required, the following will be displayed: **Service Required**.

When in Service Mode, to reset the system, press and hold the OK button **B** for more than 1 second. To turn Service Interval reminders off, uncheck Service Interval.

 
 
Service Interval Setting

When in the **Service In** screen, set the service interval:

- Press the Mode button **A** to cycle to User Settings
- Scroll down to Service Interval and select
- If Service Interval is not checked, press the OK button **B** to turn ON
- Press the OK button **B** up/down to select/change the interval setting
- Press the OK button **B** to select the interval

QUICK TIP

An "Engine Oil Change Due Soon" message appears on the Instrument Cluster LCD when the engine oil needs to be changed. After oil change, reset the oil change reminder in User Settings*. Go to Convenience, then Oil Change Reminder, then press and hold the OK button **B** for more than 1 second.



QR CODE

Vehicle & User Settings Video



Full Synthetic Oil Video



*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*

Images are for illustration purposes only and may vary.

Refer to section 4 in the Owner's Manual for more information.

Vehicle Settings* - Infotainment System (Available on certain models)

To enter the Vehicle Settings mode in the infotainment system, press the **SETUP** key or the **SETUP** button onscreen. Then press **VEHICLE** , which will take you to Vehicle Settings. Use the touchscreen to navigate through the menus.

- **Driver Assistance:** Warning Timing, Warning Volume, Forward Safety, Lane Safety and other driver assist systems
- **Active Sound Design** - Adjust the motor sound inside the cabin
- **Cluster** - Instrument Cluster settings including Service interval reminders, illumination, etc.
- **Climate** - Settings for recirculating air, automatic ventilation and defrost/defog options
- **Lights** - Settings for Ambient Light, One-touch turn signal, headlight delay and High Beam Assist
- **Door** - Settings for Auto Lock/Unlock, Two-press unlock, power liftgate
- **Convenience** - Turn on/off Rear Occupant Alert, Wireless Charging System, Auto Rear Wiper and settings for Welcome Light

QR CODES

Vehicle & User Settings Video



Ambient, Mood & Theme Lighting Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Some settings in certain models may be available through User Settings in the Instrument Cluster LCD. See section 4 in the Owner's Manual or the Car Infotainment System Quick Reference Guide.

Driving while distracted is dangerous and should be avoided. Do not attempt to change vehicle system settings while driving.

Blind-Spot Collision-Avoidance Assist (BCA)^{†4}





BCA uses a front view camera on the windshield and rear corner radar sensors in the rear bumper to monitor and warn the driver in certain situations if it detects an approaching vehicle in the driver's blind spot area and before changing lanes. Initially, BCA provides Blind-Spot Collision Warning when it detects a potential collision with a vehicle, emitting an audible warning and visual alert on the outside rearview mirrors. If the system detects that the collision risk has increased, Blind-Spot Collision-Avoidance Assist automatically applies the opposite side front brake to try and mitigate a potential collision.

 
 
 
1st-stage: When another vehicle is detected within BCW warning boundary **A**, an indicator will illuminate on the outside rearview mirrors **B**.

2nd-stage: When 1st stage warning is on and the driver activates a turn signal, a flashing indicator will illuminate on the outside rearview mirrors and the system will sound a warning.

3rd-stage: When 1st stage warning is on and the 2nd stage warning has already occurred, and the collision risk has increased, braking is applied to the opposite side front wheel and a visual warning occurs.


BCA User Settings:

- To enable BCA, go to User Settings*  in the Instrument Cluster LCD or press and hold the LCD Mode button   on the right side of the Steering Wheel, or press the **SETUP** key/button on the Infotainment System. Select the **VEHICLE** button to enter the Vehicle Settings*. Select DRIVER ASSISTANCE and then BLIND-SPOT SAFETY
- To set BCA when in Blind-Spot Safety, select:
 - Active Assist:** BCA will provide a warning (audible & visual) and braking assist will be applied depending on the collision risk levels
 - Warning Only:** Vehicle will provide a warning only (audible & visual)
 - Off:** System is off, no warnings provided
- To set the initial warning activation time, go to the User Settings*  or Vehicle Settings*, then Driver Assistance, then Warning Timing. Adjust the warning timing:
 - Standard:** Use under normal driving conditions. If it feels too sensitive, set the warning timing to **Late**.
 - Late:** The warning timing will be late

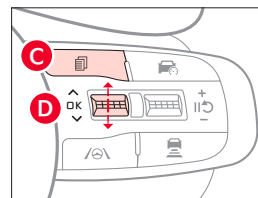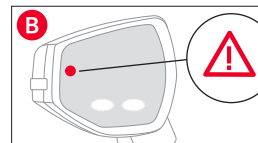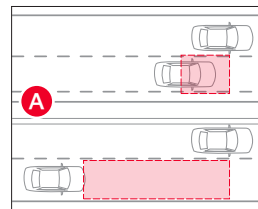

(Buttons located on right side of steering wheel)

QUICK TIPS

- The driver assist systems Warning Volume can be adjusted in User Settings*  in the Instrument Cluster or Vehicle Settings* in the Infotainment System
- BCA will sound when vehicle speed is faster than 12 mph
- BCA will activate when:
 - The system is turned on
 - Other vehicles are detected on the rear sides of the vehicle
 - Vehicle speed is above approximately 40 mph

QR CODE

Blind-Spot Collision-Avoidance Assist (BCA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

When engaged, BCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.

Refer to section 5 in the Owner's Manual for more information.

The images on this page are for illustrative purposes only and may not reflect actual feature or operation.

REMINDERS:

- BCA will not issue a warning if the vehicle speed is 6 mph or more above the surrounding vehicles
- When BCA is ON and the ignition is cycled, BCA returns to its previous state

Rear Cross-Traffic Collision-Avoidance Assist (RCCA)*†4



Rear Cross-Traffic Collision-Avoidance Assist (RCCA) is designed to warn the driver under certain conditions. It may activate the Electronic Stability Control (ESC) and temporarily apply braking if it detects cross traffic approaching the vehicle when the vehicle is in reverse.

When the RCCA rear-corner radar sensors detect approaching vehicles from the rear left or rear right side of the vehicle **A**, RCCA will sound a warning, the warning indicators on the outside rearview mirror will illuminate and a message will appear on the Instrument Cluster LCD **B** and the Infotainment System screen. If RCCA detects that the collision risk has increased, RCCA automatically applies the brakes to reduce your speed, potentially helping to minimize the effects of a possible collision.


RCCA is designed to operate under the following conditions:

- When the gear shift is in Reverse
- When the vehicle is moving slower than 5 mph

RCCA User Settings:

 
 
 
- To turn RCCA on, go to User Settings*  in the Instrument Cluster LCD or press and hold the LCD Mode button  **C** on the right side of the Steering Wheel, or press the **SETUP** key/button on the Infotainment System. Select the **VEHICLE** button to enter the Vehicle Settings*. Select DRIVER ASSISTANCE, PARKING SAFETY, then REAR CROSS-TRAFFIC SAFETY
- To set the warning timing, go to the Vehicle Settings, then go to Driver Assistance, then Warning Timing. Select one of the settings:
 - **Standard:** Use in a normal driving environment. If FCA operates too sensitively, set the warning timing to **Late**
 - **Late:** The warning timing will be slower
- The default Warning Timing is set to Standard. If the Warning Timing is changed, the warning time of other Driver Assistance systems may also change

QUICK TIP

The driver assist systems Warning Volume can be adjusted in User Settings*  in the Instrument Cluster or Vehicle Settings* in the Infotainment System.

REMINDERS:

- When vehicle power is cycled, RCCA will remain in the previous state
- When a vehicle is approaching within the sensing range, and traveling faster than 3 mph, RCCA will show a warning

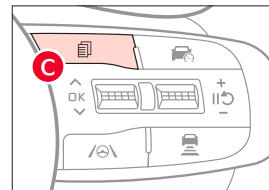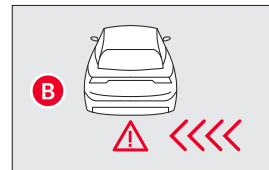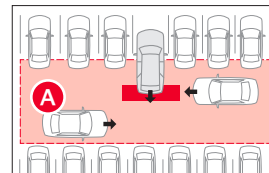

(Buttons located on right side of steering wheel)

QR CODE

Rear Cross-Traffic Collision-Avoidance Assist (RCCA) Video




Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

When engaged, RCCA is a supplemental system. Do not solely rely on this system and always pay attention to the road and its conditions.


Refer to section 5 in the Owner's Manual for more information.

Lane Keeping Assist (LKA)^{†4}

Lane Keeping Assist is designed to detect the lane markers on the road with a front view camera on the windshield, and may assist the driver's steering to potentially help keep the vehicle in the lane. When turned on, the instrument cluster indicator will initially illuminate gray. It will remain gray when the vehicle is traveling slower than 40 mph or when the system does not detect the lane markers. When the system detects the lane markers and can assist the steering, the Lane Safety icon will illuminate green.

If the vehicle begins to move outside of the lane, LKA may provide steering inputs, trying to prevent the vehicle from moving outside its lane. If LKA detects that the vehicle continues moving outside of the lane, LKA may give an audible warning and display a Lane Departure Warning on the instrument cluster. When enabled in vehicle settings*, press and hold the Lane Safety button  **A** to turn on or off.

LKA User Settings:

To enable LKA, go to User Settings* in the Instrument Cluster LCD or press and hold the LCD Mode button  **B** on the right side of the Steering Wheel, or press the **SETUP** key/button on the Infotainment System. Select the **VEHICLE** button to enter the Vehicle Settings*. Select DRIVER ASSISTANCE then LANE SAFETY.

- **Assist:** LKA will automatically assist the driver's steering when lane departure is detected to help prevent the vehicle from moving out of its lane
- **Warning Only:** LKA will warn the driver with an audible warning when lane departure is detected. This mode does NOT provide any steering assist
- **Off:** LKA will turn off. The indicator light will turn off on the cluster

All systems will operate under the following conditions:

 
- The vehicle speed exceeds approximately 40 mph
- LKA recognizes the lane the vehicle is traveling in
- The vehicle is between the lane markers

QUICK TIP


The driver assist systems Warning Volume can be adjusted in User Settings* in the Instrument Cluster or Vehicle Settings* in the Infotainment System.

REMINDERS:


- LKA will not issue a warning if the turn signals or hazard lights are activated
- When the ignition is cycled, LKA will return to the previously set state

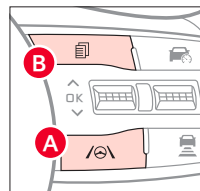

 
(Buttons located on right side of steering wheel)

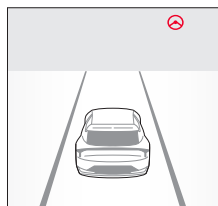

 When the front-view camera does not detect the lane traveled in the lanes are not illuminated

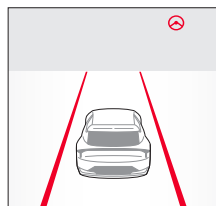

 When the front-view camera detects the lane traveled in, both lanes are illuminated

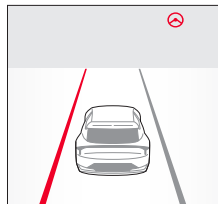

When the front-view camera detects the vehicle moving outside of the lane being traveled in, a yellow indicator will illuminate either on the left or right lane (shown in both images above)

QR CODE

Lane Keeping Assist (LKA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

When engaged, Lane Keeping Assist is not a substitute for safe driving and may not always warn the driver if the vehicle is driven outside of its lane. Always drive safely and use caution.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Actual Vehicle Settings steps may vary by model. Refer to section 5 in the Owner's Manual for more information.

 
Blind-Spot View Monitor (BVM)*†4

Blind-Spot View Monitor is designed to display the rear and side of the vehicle blind spot areas in the Instrument Cluster LCD **A** when the system is activated.

To turn BVM on, go to User Settings* in the Instrument Cluster LCD or press and hold the LCD Mode button **B** on the right side of the Steering Wheel to go to **VEHICLE** Settings* in the Infotainment System or press the **SETUP** key/button on the Infotainment System. Select **VEHICLE**, Driver Assistance > Blind-Spot Safety > Blind-Spot View.


When operating the turn signal **C**, BVM displays video of the blind-spot view for the direction indicated.

BVM will not operate when the Power button is off, a turn signal is deactivated or another warning screen comes up on the Instrument Cluster LCD.

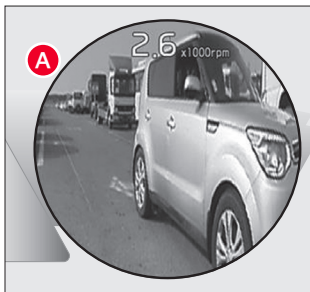


(LCD display showing right side of vehicle)

Images are for illustrative purposes only and may not reflect actual feature or operation. See section 6 in the Owner's Manual for more information.

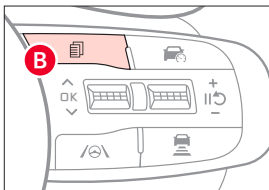 

 
(Buttons located on right side of steering wheel)

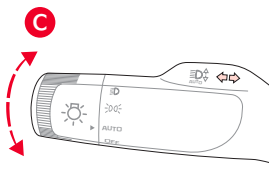


Safe Exit Warning (SEW)*†4

Safe Exit Warning can help prevent passengers from opening their door by displaying a warning message on the Instrument Cluster LCD **D** and sounding an audible warning when a vehicle is detected **E**, approaching from behind, after your vehicle has stopped.

 To turn on SEA, go to User Settings* in the Instrument Cluster LCD or press and hold the Mode button **B** on the right side of the Steering Wheel to go to **VEHICLE** Settings* in the Infotainment System or press the **SETUP** key/button on the Infotainment System. Select **VEHICLE**, then select Driver Assistance, Blind-Spot Safety, and select Safe Exit Warning.

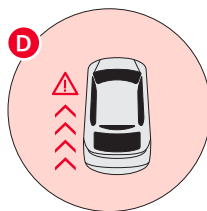

(Message on Cluster Display)

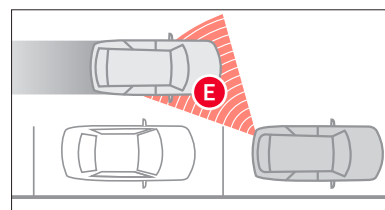 

QUICK TIP

The driver assist systems Warning Volume can be adjusted in User Settings* in the Instrument Cluster or Vehicle Settings* in the Infotainment System.

When engaged, these systems are not substitutes for safe driving and are not substitutes for safe driving and may not always detect objects or people around the vehicle.

Images are for illustrative purposes only and may not reflect actual feature or operation. See section 4 in the Owner's Manual for more information.

QR CODES

Blind-Spot View Monitor (BVM) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Lane Following Assist (LFA)^{†4}



Lane Following Assist (LFA) is designed to help the vehicle stay centered in its lane **A** by monitoring the detected lane markings ahead and adjusting the steering. The instrument cluster indicator will initially illuminate gray **A** when turned ON. It will remain gray when the system does not detect the lane markers. When the system detects the lane markers and can assist the steering, the LFA icon will illuminate green **B**. Press the LFA button **C** to turn LFA on or off.

 
 
Hands-off Warning - If the driver takes their hand off the Steering Wheel for several seconds, a warning message will appear on the Instrument Cluster, and an audible warning will sound. If hands-on Steering Wheel is not detected, LFA will cancel.

LFA will operate only when these conditions are met:

- LFA recognizes both sides of the lane markers the vehicle is traveling in
- The vehicle is traveling slower than 110 mph


LFA User Settings*:

- To enable LFA, go to User Settings*  in the Instrument Cluster LCD or press and hold the LCD Mode button  **D** on the right side of the Steering Wheel, or press the **SETUP** key/button on the Infotainment System. Select the **VEHICLE** button to enter the Vehicle Settings*. Select DRIVER ASSISTANCE then LANE SAFETY

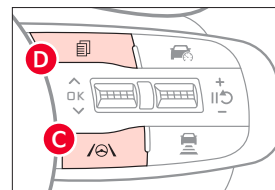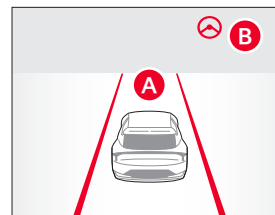

(Buttons located on steering wheel)

QUICK TIP

The driver assist systems Warning Volume can be adjusted in User Settings*  in the Instrument Cluster or Vehicle Settings* in the Infotainment System.

REMINDER: LFA is not a substitute for safe and proper driving. Always drive safely and use caution.

QR CODE

Lane Following Assist (LFA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Images are for illustrative purposes only and may not reflect actual feature or operation.

LFA is supplemental. Do not solely rely on this system and always pay attention to the road and its conditions.

Actual Vehicle Settings steps may vary by model. See section 5 in the Owner's Manual for more detailed information, limitations and conditions.


When engaged, LFA is not a substitute for safe and proper driving. Always drive safely and use caution. LFA may not always alert the driver when the vehicle is approaching another vehicle.

Forward Collision-Avoidance Assist (FCA)*†4

FCA is designed to detect and monitor a vehicle ahead or detect a pedestrian in the roadway through front view camera recognition and front radar signals to warn the driver that a collision is imminent, and if necessary, temporarily apply emergency braking. Initially, FCA provides Forward Collision Warning when it detects a potential collision with a vehicle, pedestrian, or cyclist, emitting an audible warning and visual alert on the instrument cluster **A**.

If the system detects that the collision risk has increased, Forward Collision-Avoidance Assist automatically applies the brakes to reduce your speed **B**, potentially helping to reduce the effects of a possible collision. With the turn signal on, if it detects a potential collision, Junction Turning **C** may help to avoid the collision with an oncoming vehicle in an adjacent lane when turning left by applying emergency braking.

 
 
 
FCA User Settings:

- FCA is ON by default in most Kia models. FCA can be turned ON/ OFF by going to the User Settings* ⚙️ or Vehicle Settings in the Infotainment System
- To enable FCA, go to User Settings* in the Instrument Cluster LCD or press and hold the button  **C** on the right side of the Steering Wheel, or press the **SETUP** key/button on the Infotainment System. Select the **VEHICLE** button to enter the Vehicle Settings*. Select DRIVER ASSISTANCE then FORWARD SAFETY. Then select one of the following modes:
 - Active Assist:** Vehicle will provide a warning (audible & visual) and may apply the brakes if needed
 - Warning Only:** Vehicle will provide a warning only (audible & visual)
 - Off:** System is off, no warnings or braking provided
- To adjust the FCA initial warning activation time, go to User Settings* ⚙️ or Vehicle Settings*, Driver Assistance, Warning Timing then select Standard or Late, depending on your Kia model:
 - Standard:** Use in a normal driving environment. If FCA operates too sensitively, set the warning timing to **Late**
 - Late:** The warning timing will be slower

FCA/FCW will become active when the:

- Ignition is on or the Power button* is ON
- Vehicle is traveling faster than 3 mph
- Electronic Stability Control (ESC) is ON

For illustrative purposes only. Your actual display, buttons and/or features may vary.

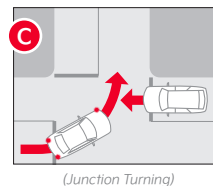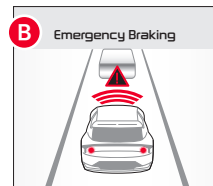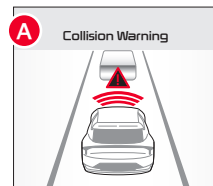


(Junction Turning)

QUICK TIP

The driver assist systems Warning Volume can be adjusted in User Settings* ⚙️ in the Instrument Cluster or Vehicle Settings* in the Infotainment System.

REMINDERS:

- FCA will be activated by default when the ignition is cycled ON, even when previous setting was OFF
- If FCA is operating and the ESC (Electronic Stability Control) is turned off, FCA is automatically turned off
- When FCA is off, the FCA warning indicator is on in the Instrument Cluster 
- Once the risk factors are not detected, these functions will deactivate, then the driver must steer the vehicle

QR CODE

Forward Collision-Avoidance Assist (FCA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos



(Buttons located on steering wheel)

Forward Collision-Avoidance Assist (FCA) is not a substitute for safe driving and may not detect all objects in front of the vehicle. Always drive safely and use caution. Actual User Settings steps may vary by model. Refer to section 5 in the Owner's Manual for more information.

Highway Driving Assist (HDA)*†4



Highway Driving Assist (HDA) is designed to adjust the speed of the vehicle when driving on limited/controlled access highways/freeways.

When HDA is activated and the conditions are met, the Instrument Cluster indicator **A** will illuminate green. If proper conditions are not met, HDA will be in standby mode and the HDA indicator light **B** will illuminate gray. When in operation, and if both lanes are recognized, the Instrument Cluster will show the lanes illuminated white and the HDA indicator illuminated green **A**.


HDA will operate only when these conditions are met:

- When driving on limited/controlled access highways/freeways
- Entering or driving on the operable road when Smart Cruise Control and Lane Following Assist are operating

 
 
 
HDA User Settings:

To enable HDA, go to User Settings*  in the Instrument Cluster LCD or press and hold the LCD Mode button  **C** on the right side of the Steering Wheel to go to **VEHICLE** Settings*. You can also press the **SETUP** key/button on the Infotainment System, VEHICLE, DRIVER ASSISTANCE, DRIVER CONVENIENCE, then HIGHWAY DRIVING ASSIST.

QUICK TIP

The driver assist systems Warning Volume can be adjusted in User Settings*  in the Instrument Cluster or Vehicle Settings* in the Infotainment System.

REMINDER: When vehicle power is cycled, the system returns to its previous state, on or off.

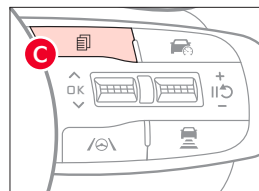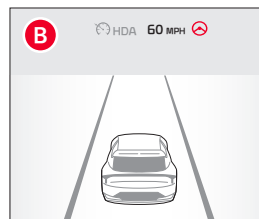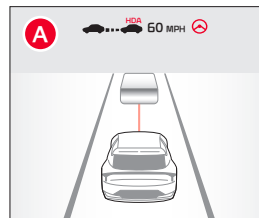

(Buttons located on steering wheel)

QR CODE

Highway Driving Assist (HDA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

When engaged, Highway Driving Assist is not a substitute for safe driving, may not detect all objects around the vehicle, and only functions on certain federal highways. Always drive safely and use caution.



See section 6 in the Owner's Manual for more detailed information, limitations and conditions.

Images are for illustrative purposes only and may not reflect actual feature or operation.

Forward/Reverse Parking Distance Warning (PDW)*†4


Forward/Reverse Parking Distance Warning (PDW) is a supplemental system that is designed to assist the driver by chiming if certain objects are detected within the sensing area to the front and rear of the vehicle when moving forward or backing up.

  PDW is activated when the ignition is ON and the vehicle is in **R** (Reverse). To deactivate the system, press the Parking Safety button **A**.

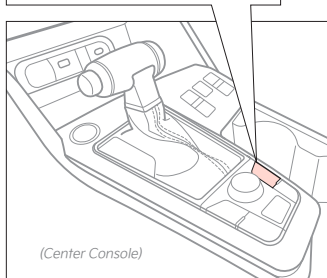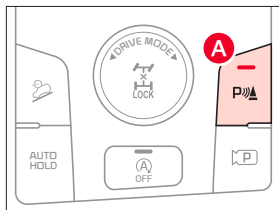

(Center Console)

 (Button located below gear shift)

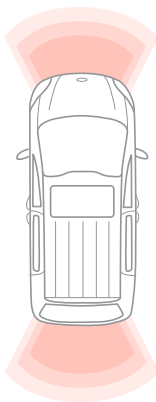

QUICK TIP

The driver assist systems Warning Volume can be adjusted in User Settings* in the Instrument Cluster or Vehicle Settings* in the Infotainment System.

REMINDERS:

- If the vehicle is moving at speeds over 3 mph, the system may not activate correctly
- When more than two objects are sensed at the same time, the closest one will be recognized first

When engaged, Forward/Reverse Parking Distance Warning (PDW) is not a substitute for proper and safe backing-up procedures. Always drive safely and use caution when moving the vehicle forward or in reverse. Forward/Reverse Parking Distance Warning (PDW) may not detect every object in front of or behind the vehicle.

Image is for illustrative purposes only and features or functions may vary on actual vehicle. Refer to section 5 in the Owner's Manual for more information.

QR CODE

Forward/Reverse Parking Distance Warning (PDW) Video




Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos


ADAS


Smart Cruise Control (SCC)*†4


Smart Cruise Control is designed to maintain a predetermined distance from vehicles detected ahead by automatically adjusting the driving speed as needed. When traffic is detected, the vehicle will slow down to maintain a set distance behind traffic without depressing the accelerator or brake pedal.


With SCC on and activated, the vehicle distance set, and the system detects a vehicle slowing or stopping, the system can bring the vehicle to a complete stop. When the vehicle ahead starts to move forward, SCC re-engages. If the vehicle ahead stops for more than 3 seconds, depress the accelerator pedal or operate the +, - or  switch to start moving the vehicle.

To set/adjust SCC speed:

 
- Press the button  **A** to turn system ON and set speed. The CRUISE indicator will illuminate on the instrument cluster
- **Increase speed:** Press the [+] switch **B** up to increase the set vehicle speed
- **Decrease speed:** Press the [-] switch **B** down to decrease the set vehicle speed
- The indicator light, set speed and vehicle distance will illuminate on the Instrument Panel screen

To pause or resume SCC operation: Press the pause/resume button  **B**. The SCC indicator on the Instrument Panel will turn OFF.


To set the vehicle-to-vehicle distance: Press the Vehicle Distance button  **F** on the steering wheel. The image on the LCD screen **E** will change when scrolling through the settings.

To turn SCC system OFF: Press the Driving Assist button  **A**.

The SCC system is a supplemental system and is not a substitute for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.

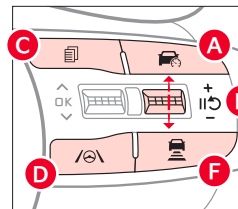

 (Type B; buttons located on right side of Steering Wheel)

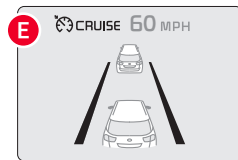

QR CODE

Smart Cruise Control with Stop & Go Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Images are for illustrative purposes only and may vary on actual vehicle.

Refer to section 5 in the Owner's Manual for more information.

QUICK TIPS

- If your vehicle speed is between 0-20 mph when you press the Driving Assist **A** button, the set speed will be set to 20 mph.
- When following a vehicle, the system will automatically adjust your cruise speed based on the vehicle detected ahead

REMINDERS:

- SCC is also canceled when the driver's door is opened, gear shift is changed out of D (Drive), EPB is activated and various other conditions. See Owner's Manual for other conditions
- If SCC is left on, it can be activated inadvertently. Keep the system off when not in use to avoid setting a speed that the driver is not aware of
- When following a vehicle, the system will automatically adjust your cruise speed based on the vehicle detected in front

Cruise Control (CC)^{†17}

A Cruise / Driver Assist button :


Press to turn the Cruise Control ON/OFF

 
B + button: Press up to increase cruising speed

- button: Press down to set or decrease cruising speed

Press button **B** to pause or resume cruise control

A To cancel Cruise Control, do one of the following:

- Press the brake pedal
- Press the Cruise / Driver Assist button 

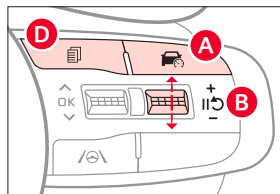

(Type B; buttons located on right side of Steering Wheel)

QUICK TIPS

- Cruise Control is designed to function at above approximately 20 mph
- Cruise Control will not activate until the brake pedal has been depressed at least once after ignition ON or engine starting

REMINDER: In standard Cruise Control, the driver needs to manually assess the distance from other vehicles as the system will not automatically apply brakes

When engaged, SCC and Cruise Control are supplemental systems and are not substitutes for safe driving. Your vehicle's steering wheel buttons may differ from those in the illustrations.

Refer to section 5 in the Owner's Manual for more information.

Navigation-based Smart Cruise Control (NSCC)^{†4,8}

Navigation-based Smart Cruise Control can automatically adjust the vehicle speed when it detects a curved road ahead and when it receives road information from the navigation system.

To turn on NSCC, go to the Vehicle Settings in the infotainment system, select Driver Assistance, Driving Convenience, Highway Auto Speed Change. When SCC is on and operating, the vehicle is driving on limited/controlled access highways and NSCC is turned on, then NSCC is enabled and the NAV icon **D** will illuminate white on the Instrument Cluster.

When NSCC detects a curve ahead, NSCC activates and reduces the vehicle speed, the NAV icon **D** will turn green. When the vehicle passes the curved road, the vehicle may return to its previously set SCC speed.

Autoset (Automatic change of set speed): If the set speed is set to the current speed limit on the highway during NSCC operation, the set speed is changed automatically whenever the speed limit changes.

REMINDEERS:

- NSCC requires an active navigation subscription
- NSCC is only available on controlled access roads and highways

 
See section 6 in the Owner's Manual for more information. For more setting information, refer to the Car Infotainment System Quick Reference Guide. NSCC and Cruise Control are supplemental systems and are not substitutes for safe driving. It is the responsibility of the driver to always check the speed and distance to the vehicle ahead.

QR CODE

Navigation-based Smart Cruise Control (NSCC) Video




*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*

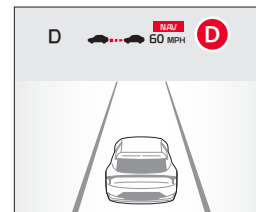

(Display on LCD screen)

 
Driver Attention Warning (DAW)*†5

DAW is designed to alert the driver if it detects inattentive driving practices and, in certain situations, can give a warning signal to take a break from driving.

DAW User Settings: To turn DAW ON/OFF, go to User Settings* in the Instrument Cluster LCD or press and hold the LCD Mode button  **A** on the right side of the Steering Wheel to go to Vehicle Settings* in the infotainment system. Go to Driver Assistance > Driving Attention Warning > Select Leading Vehicle Departure Alert or Inattentive Driving Warning.

If DAW is activated, the DAW information will appear on the Instrument Cluster LCD Display **B** when you select the Assist mode .

A message, "Consider taking a break," appears on the LCD display **C** and a warning sounds to suggest the driver to take a break when the driver's attention level is low.

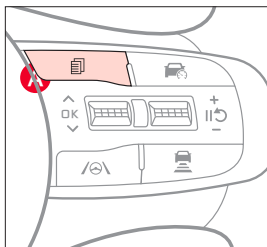

(Buttons located on right side of steering wheel)



REMINDERS:

- The setup of DAW will be maintained, as selected, when the ignition is cycled
- When activated, DAW does not display "Consider taking a break" message when the total trip driving time is less than 10 minutes
- DAW will enter a standby mode if the camera does not detect the lanes and/or the driving speed remains under 40 mph

QR CODE

Driver Attention Warning (DAW) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

When engaged, Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.

Refer to section 5 in the Owner's Manual for more information.

Images are for illustrative purposes only and may not reflect actual feature or operation.

Leading Vehicle Departure Alert (LVDA)^{†4}

 
 
Leading Vehicle Departure Alert is a feature part of Driver Attention Warning (DAW), and is designed to inform the driver when the vehicle in front starts moving or departs from a stop. When Driver Attention Warning (DAW) is on, your vehicle is stopped and detects that the leading vehicle is driving away, DAW sounds an alert to let you know you can start driving. If no action is taken after the vehicle in front drives away, then a message **A** will appear on the Instrument Cluster LCD.

User Settings:

- To enable LDVA, go to User Settings* in the Instrument Cluster LCD or press and hold the LCD Mode button **B** on the right side of the Steering Wheel to go to Vehicle Settings*. You can also press the **SETUP** key/button on the Infotainment System, VEHICLE, DRIVER ASSISTANCE, DRIVER ATTENTION WARNING and then LEADING VEHICLE DEPARTURE ALERT
- To adjust the DAW initial warning activation time, go to User Settings* **⚙️** or Vehicle Settings*, Driver Assistance, Warning Timing then select Standard, or Late, depending on your Kia model:
 - **Standard:** Use in a normal driving environment. If FCA operates too sensitively, set the warning timing to **Late**
 - **Late:** The warning timing will be slower

REMINDERS:

- When the vehicle power is cycled, the system returns to its previous state, on or off
- Always check the front of the vehicle and road conditions before departure

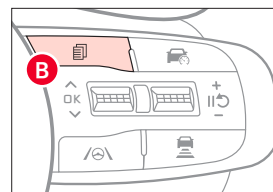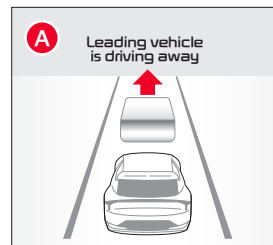

(Buttons located on steering wheel)

QR CODE

Leading Vehicle Departure Alert (LVDA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Leading Vehicle Departure Alert is not a substitute for safe and proper driving. Always drive safely and use caution.

Images are for illustrative purposes only and may not reflect actual feature or operation.

Rear View Monitor (RVM)^{†4}

Rear View Monitor is a supplemental system that displays the view behind the vehicle through the infotainment system screen while the vehicle is in Reverse.

To turn RVM on/off, press the Parking/View button **A** on the center console.

RVM User Settings:


- **Camera Settings** - Go to User Settings* in the Instrument Cluster LCD or press and hold the LCD Mode button **B** on the right side of the Steering Wheel to go to Vehicle Settings* in the Infotainment System or press the SETUP key/button on the Infotainment System. Select **VEHICLE**, DRIVER ASSISTANCE, PARKING SAFETY, then CAMERA SETTINGS
- To adjust the warning volume, press the **SETUP** key/button on the Infotainment System, **VEHICLE**, DRIVER ASSISTANCE then WARNING VOLUME. Select high, medium, low

The Rear View Monitor activates when the:


- POWER button is in the ON/READY position
- Gear shifter is in the **R** (Reverse) position

REMINDERS:



- The images shown are for illustration purposes only and may not reflect actual operation
- While camera is active, only the Infotainment System can be operated on the Steering Wheel and Audio Head Unit. All other features are disabled
- Rear View Monitor may not display every object behind the vehicle
- Adjusting the Warning Timing and Warning Volume may adjust timing and volume levels for other driving assist systems

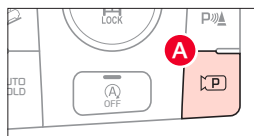 

(Button located below gear shift knob)

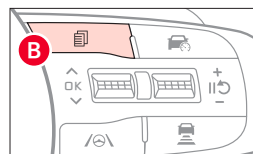 

(Buttons located on steering wheel)

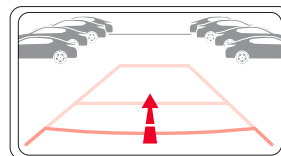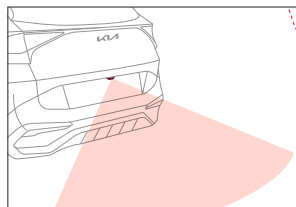  

When engaged, RVM is not a substitute for proper and safe backing-up procedures. Rear View Monitor may not display every object behind the vehicle. Always drive safely and use caution when backing up.

Surround View Monitor (SVM)*†4

Surround View Monitor (SVM) is a parking support system that shows the areas around the front, rear, left and right sides of the vehicle, as well as a 3D view of the vehicle via four cameras displayed onto the infotainment screen.

- Press the Parking/View button **A** to turn on Surround View Monitor. Press the button again to turn off the function
- Other view modes can be selected by touching the view icons **B** on the Surround View Monitor screen
- **Surround View Monitor Auto On:** From the Vehicle Settings* menu, select Driver Assistance → Parking Safety → Surround View Monitor Auto On, and the front parking assist view screen is displayed when Parking Distance Warning warns the driver while driving in D (Drive)

 
 
To change the SVM settings, press the onscreen settings icon **C**, while SVM is operating.

QUICK TIP


The Front View of SVM will turn off when the gear shift is moved into Park or Reverse or the Parking/View button is pressed.

REMINDERS:

- The SVM camera is equipped with an optical lens to provide a wider range of vision and may appear different from the actual distance
- While the SVM is active, and Parking Safety Priority is selected in the User Settings* / Vehicle Settings*, the volume will be lowered on all audio modes

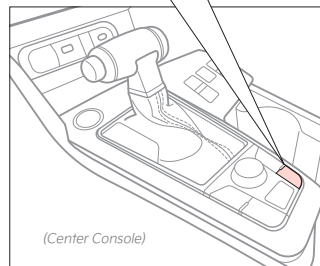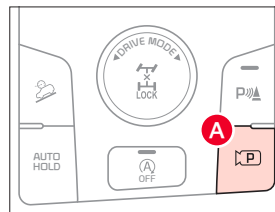

(Button located below gear shift)

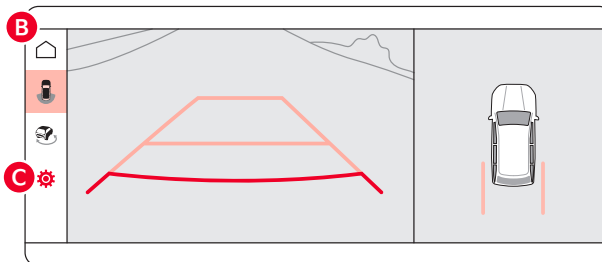 

QR CODE

3D Surround View Monitor (SVM) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Images are for illustrative purposes only and may not reflect actual feature or operation.

When engaged, Surround View Monitoring (SVM) is only a supplemental device. Drivers should not rely solely on the SVM information when parking and backing up. Drivers should always pay attention and directly check the left/right and rear.

See section 6 in the Owner's Manual for more information.

Reverse Parking Collision-Avoidance Assist (PCA)*†4

Reverse Parking Collision-Avoidance Assist (PCA) is designed to detect certain objects/ pedestrians behind the vehicle and issues an audible warning and/or applies emergency braking to help reduce the possibility of a collision when the vehicle is in reverse. When Reverse Parking Collision- Avoidance Assist activates, a line appears behind the vehicle image **A** in the instrument cluster LCD.

PCA User Settings:

To turn PCA on, go to User Settings* **⚙️** in the Instrument Cluster LCD or press and hold the LCD Mode button **⏏️** **B** on the right side of the Steering Wheel or press the **SETUP** key/button to go to Vehicle Settings* in the Infotainment System. Select **VEHICLE, DRIVER ASSISTANCE, PARKING SAFETY**.

Select from one of the three modes:

 
- **Rear Active Assist** - PCA will warn the driver with an audible alert and may apply temporary braking
- **Rear Warning Only** - PCA will warn the driver with an audible alert
- **Off** - PCA is disabled

To adjust the warning volume, in the Vehicle Settings*, press the **SETUP** key/button on the Infotainment System, **VEHICLE, DRIVER ASSISTANCE** then **WARNING VOLUME**. Select high, medium, low.


To set the warning timing, in the Vehicle Settings*, press the **SETUP** key/button on the Infotainment System, **VEHICLE, DRIVER ASSISTANCE** then **WARNING TIMING**:

- **Standard:** Use in a normal driving environment. If FCA operates too sensitively, set the warning timing to **Late**
- **Late:** The warning timing will be slower

REMINDER: Adjusting the Warning Timing and Warning Volume may adjust timing and volume levels for other driving assist systems.

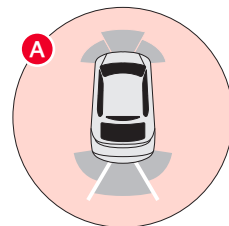

(Message on Cluster Display)

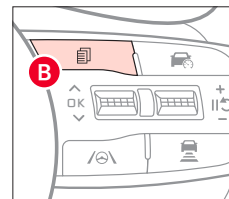 

(Buttons located on steering wheel)

QR CODE

Reverse Parking Collision-Avoidance Assist (PCA) Video




Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Images are for illustrative purposes only and may not reflect actual feature or operation.

Instrument Cluster Illumination Control

 With parking lights/headlights ON, press switch **A** (+) or (-) to adjust the brightness of the instrument panel illumination.

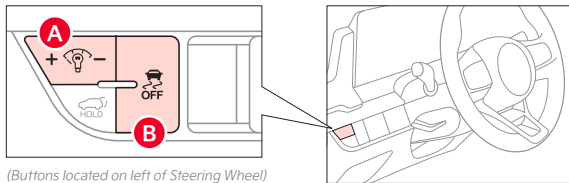

(Buttons located on left of Steering Wheel)

REMINDER: This control does not adjust brightness on the audio head unit screens. Use the display settings in the Setup menu to adjust the brightness on the screen.

Refer to section 4 in the Owner's Manual for more information.

Electronic Stability Control (ESC)^{†6}

The ESC system is designed to help stabilize the vehicle during certain cornering maneuvers. It is a good idea to keep the ESC turned ON for daily driving whenever possible.

Press and hold the ESC button **B** turn ESC OFF/ON.

REMINDEERS:

- ESC is turned ON by default at vehicle startup. When ignition is cycled, ESC will turn ON again
- The ESC Indicator Light in the instrument cluster will illuminate whenever the ESC is in operation

Refer to section 5 in the Owner's Manual for more information. For illustrative purposes only. Your actual display, buttons and/or features may vary.

Hill-Start Assist Control (HAC)^{†6}

HAC is designed to help prevent the vehicle from rolling backward when accelerating from a stop while on a steep incline.

The HAC automatically activates whether the ESC is OFF or ON but does NOT activate when the ESC has malfunctioned.

QUICK TIPS

- When HAC is active (e.g., during initial acceleration from a stop on an incline), you may notice that the brakes will momentarily remain engaged after you depress the accelerator - this is normal operation
- HAC provides a two-second delay before the vehicle may start rolling backward

 
REMINDEERS:

- HAC does not operate when the gear shift is in the **P** (Park) or the **N** (Neutral) position
- HAC does not replace the need to apply brakes while the vehicle is stopped on an incline
- In the event of HAC system malfunction, see an Authorized Kia Dealer for service

Power Liftgate Open/Close Button*

Open: Press and hold briefly the **C** button for approximately one second to open the liftgate.

Close: Press and hold the **C** button until liftgate is completely closed. If the button **C** is released while closing, the power liftgate will stop and a warning chime will sound.

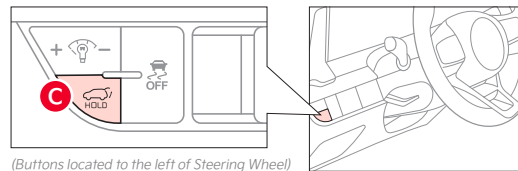

(Buttons located to the left of Steering Wheel)

Refer to section 4 in the Owner's Manual for more information.

QR CODE

Liftgate Buttons and Operation Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Power Windows, Window Lock & Central Door Lock

- A** Pull/Press to operate Driver's Window Auto Up*/Down

QUICK TIP

 
Press button again to stop Auto Up/Down function.

- B** Press to Lock/Unlock All Doors (also unlocks Fuel Door)
C Press to disable Rear Passenger Windows

QUICK TIPS

While driving with the rear windows down or with the sunroof* in an open or partially open position, a wind buffeting or pulsation noise may be heard. This noise is a normal occurrence and can be reduced or eliminated by the following:

- If the noise occurs with one or both of the rear windows down, partially lower both front windows approximately 1 inch
- If the noise occurs with the sunroof open, slightly reduce the size of the sunroof opening

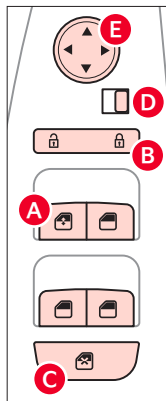

REMINDERS:

- When pressed **C**, the rear passengers cannot operate the window controls.
- When closing, be mindful of any objects or persons

 
Button configuration may vary depending on vehicle model. Refer to section 4 in the Owner's Manual for more information.

Manual Folding Mirrors*

To fold the mirrors in manually, pull the mirror towards the window.

QUICK TIP

If needed, pull the mirror firmly until it folds.

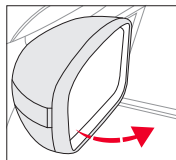

Refer to section 4 in the Owner's Manual for more information.

Automatic Door Lock/Unlock

Auto Door Lock/Unlock will engage when the gear shift is moved into or out of the P (Park) position. Refer to the User Settings in the LCD Instrument Cluster modes on how to turn Auto Door Lock/Unlock ON/OFF.

Refer to section 4 in the Owner's Manual for more information.

Power Outside Mirrors*

- D** Move the button to the right or left to select the mirror to adjust
E Press button arrows left/right or up/down to adjust mirror position

Refer to section 4 in the Owner's Manual for more information.

Heated Outside Mirrors*

Mirror heaters automatically turn ON/OFF at the same time the Rear Window Defroster is turned ON/OFF. The Rear Window Defroster button* is located on climate control system panel.

Refer to section 4 in the Owner's Manual for more information.

Engine Start/Stop Button*†7

To start the engine:

1. Depress the brake pedal
2. Press the Engine Start/Stop button while the gear shift is in **P** (Park) or **N** (Neutral)

To turn the engine OFF, press the Engine Start/Stop button.

To use the Engine Start/Stop button, you must have the Smart Key fob on your person or inside the vehicle.

QUICK TIPS

To use electrical accessories:

ACC position

- When in the OFF position and without depressing the brake pedal, press the Engine Start/Stop button once **A**

On position

- When already in the ACC position **A** and without depressing the brake pedal, press the Engine Start/Stop button again **B**
- When in the OFF position and without depressing the brake pedal, press the ENGINE START/STOP button twice **A**

 
Keeping the vehicle in ACC or the ON position for extended periods of time without turning the engine on may discharge the vehicle's battery

REMINDERS:

- In an emergency situation while the vehicle is in motion, you are able to turn the engine off and to the ACC position by pressing the Engine Start/Stop button for more than 2 seconds or 3 times successively within 3 seconds
- If Smart Key fob battery is dead, with the lock button facing the Engine Start/Stop button, hold the fob up against the Engine Start/Stop button and press and hold until the engine starts
- Do not turn the vehicle off by pushing the Start/Stop button while the vehicle is in motion. If the vehicle has been turned off the power brake and power steering system cannot operate
- With the vehicle off, hydraulic power assist for steering and braking will be disabled and the vehicle will be more difficult to control

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 5 in the Owner's Manual for more information.

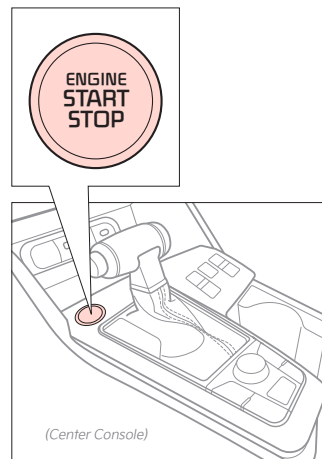

(Center Console)

(Button located above gear shift)

QR CODE

Start/Stop Button Video

 


Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Headlights & High Beams

To operate:

- Rotate lever to change the Headlight function
- Push lever to turn High Beams ON
- Pull lever to flash Headlights / High Beams

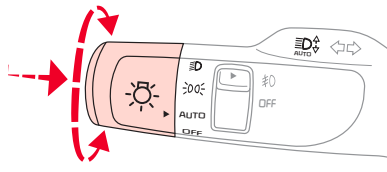

- Headlight ON position
- Parking light position
- AUTO** Auto Light* / DRL / HBA
- OFF** Lights OFF

AUTO Light* — When the light switch is in the AUTO Light position, the tail lights and headlights will turn ON/OFF automatically, depending on the amount of light outside the vehicle.

Daytime Running Lights (DRL)

DRL may help others to see the front of your vehicle during the day. The lights will be on automatically when the ignition or Engine Start/Stop button is ON and the headlight switch is in the AUTO position, unless one of the following occurs:

- Headlights are on
- Parking brake is applied
- Fog lights are on
- Engine is turned off
- Switch is in the OFF position

REMINDER: DRL only operates during the daytime.

Refer to section 4 in the Owner's Manual for more information.

High Beam Assist (HBA)

High Beam Assist is designed to automatically adjust the headlight range by switching between high and low beams based on light detected from other vehicles and road conditions.

To enable HBA, toggle the light switch to the AUTO Light position and turn on the high beams by pushing the lever away from you. The High Beam Assist indicator will illuminate.

REMINDEERS:

- HBA will operate when vehicle speed exceeds 25 mph
- If the lever is pushed away from you while HBA is operational, HBA will turn off and the high beams will be on continuously
- If the light switch is switched to the headlight position, HBA will turn off and the low beams will be on continuously

Refer to section 4 in the Owner's Manual for more information.

QR CODE

High Beam Assist (HBA) Video



Steering Wheel Controls Video



 
*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*

Turn Signals & Fog Lights*

To operate:

- Turn Signals - Move lever Up/Down for Right/Left Turn Signal
- Slightly move lever up/down to activate One-Touch Lane Change Signal
- Fog Lights - Press switch **A** up/down to turn Fog Lights ON/OFF

REMINDER: Headlights must be ON for fog light operation.

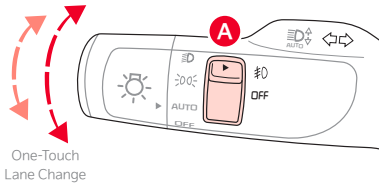

One-Touch Lane Change Signal is activated by briefly pressing the Turn Signal Lever up/down slightly for less than 1 second and then releasing. The lane change signal will blink 3 times.

To change how many times (3/5/7) the Lane Change Signal blinks, go to the User Settings Mode in the LCD Instrument Cluster and select Lights, then One-Touch Turn Signal.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

 
For more information on the User Settings Mode, please refer to section 4 in the Owner's Manual.

Windshield Wipers & Washers

Front Wiper & Washer

To operate front wipers and washers:

- Move lever Up/Down to change Wiper modes
- Press INT switch **B** up/down to adjust Intermittent Wipe Speed
- Pull lever to spray and wipe

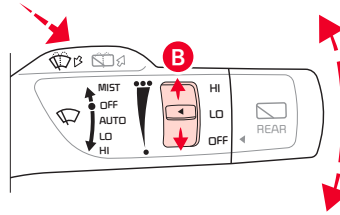

- MIST:** Single wipe
- OFF:** Wiper off
- INT:** Intermittent Wipe
- LO:** Slow Wiper Speed
- HI:** High Wiper Speed

 
QUICK TIPS

- Moving switch **B** to HI increases intermittent wipe frequency and wipe speed.
- Moving switch **B** to LO decreases frequency of wipes
- Set the wiper to OFF position when the wiper is not in use

Rear Wiper & Washer

To operate rear wipers and washers:

- Rotate Rear Wiper switch to change Wiper modes
- Push lever to spray and wipe

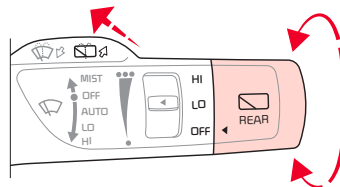

- HI:** Continuous wipe
- LO:** Slow wipe
- OFF:** Wiper off

QUICK TIP

LO and HI sets wiper speed. No intermittent wipe function is available on rear wipers.

Refer to section 4 in the Owner's Manual for more information.

QR CODE

Wipers and Wiper Stalk Video



Wiper Service Mode Video



*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*

Tilt/Telescoping Steering Wheel

To adjust the Steering Wheel, press the lock-release lever **A** down and adjust to the desired angle **B** and then the distance **C**.

 
When finished, pull the lock-release lever **A** up to lock Steering Wheel in place.

QUICK TIP

It may be helpful to pull/push bottom of Steering Wheel towards/away from you to adjust desired distance prior to adjusting the angle

Do not adjust the steering wheel while driving as this may cause you to lose control of the vehicle.

Refer to section 4 in the Owner's Manual for more information.

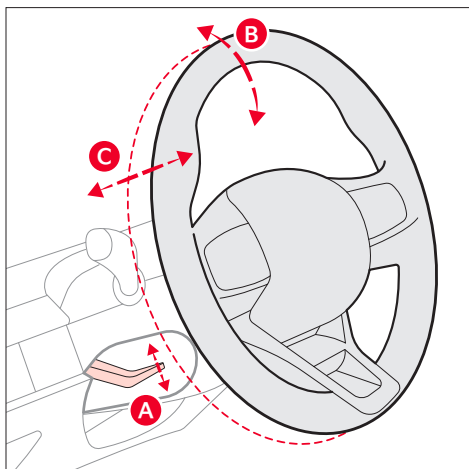


Heated Steering Wheel*

While the Engine Start/Stop button is in the ON position, press the Heated Steering Wheel button **D** to turn the steering wheel heater ON/OFF. The steering wheel heater will turn off automatically in 30 minutes, or when button **D** is pressed again to deactivate.

QUICK TIP

If ignition is cycled, the Heated Steering Wheel turns OFF. Press button again to turn ON

 REMINDER: If the steering wheel becomes too warm, turn the system off. The heated steering wheel may cause burns even at low temperatures, especially if used for long periods of time.

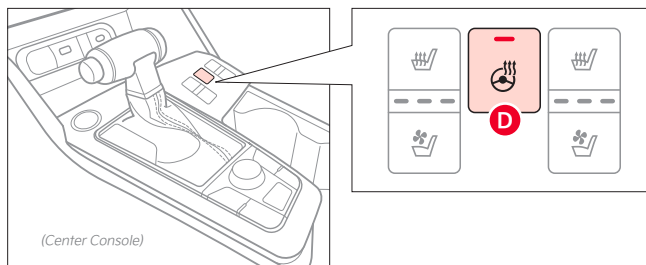

Refer to section 4 in the Owner's Manual for more information.

QR CODE

Tilt/Telescoping/Heated Steering Wheel Video



*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*

Audio Controls^{†17}

- A Audio MODE button:** Press to cycle through FM/AM/SiriusXM®/ Media modes. Press to turn power on; Press and hold to turn power off; Press and hold to go to Advanced Setting / Steering Wheel mode (Kia Connect with Smart Navigation*)
- B Seek/Preset button**
Radio Mode (FM/AM/SiriusXM®): Press to advance through Preset Stations. Press and hold to Auto Seek
Media Modes: Press to move Track Forward/Back. Press & hold to Fast Forward/Rewind (except for *Bluetooth*® Audio)
- C Volume button:** Press up/down to raise/lower volume
Mute button: Press to mute all audio (in some Media modes the media pauses when pressed)
- D Custom button:** Press to access user-selected feature. Press and hold the button to set the button to one of the features available

 
QUICK TIP

Pressing the Audio MODE button **A** for more than 1 second will turn Audio Mode ON/OFF

To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

Your vehicle's steering wheel buttons may differ from those in the illustrations. For further audio system operation, refer to pages 32-38. Refer to section 4 in the Owner's Manual or the Car Infotainment System Quick Reference Guide for more information.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

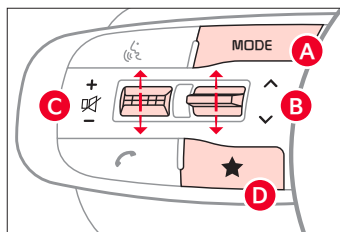

QR CODE

Steering Wheel Controls Video



Star, Favorite & Radio Presets Buttons Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Bluetooth® Wireless Technology†3,17

- A Talk button:** Press to activate voice recognition/bring up menus/set destinations (if equipped with navigation) with minimal voice command prompts from the system. Press and hold to exit voice recognition
- B Volume button:** Press up/down to raise/lower speaker volume
- Mute button:** Press to mute the microphone during a call and to mute the audio system speakers, or to pause Bluetooth® streaming media
- C Receive/Place/End Call button:** Press to receive/place/end calls. If no phone is paired, press button to pair a phone

QUICK TIPS

 
- When using the voice command feature, wait for the system BEEP before speaking the command
- Phone book transfer upload time varies by phone model and with number of phone book entries
- Because of differences in phone quality, service providers and Bluetooth® Wireless Technology chip programming, functionality may differ from one phone to another

For Bluetooth® Wireless Technology FAQs, go to www.kia.com, or call Consumer Information for Bluetooth® Technology at (800) 333-4KIA.

For more information, refer to the Car Infotainment System Quick Reference Guide. For Bluetooth® wireless technology FAQs, go to www.kia.com, Owners section.

Your vehicle's steering wheel buttons may differ from those in the illustrations. See your Owner's Manual for more details.

Driving while distracted is dangerous and should be avoided. Drivers should remain attentive to driving and always exercise caution when using the steering-wheel-mounted controls while driving.

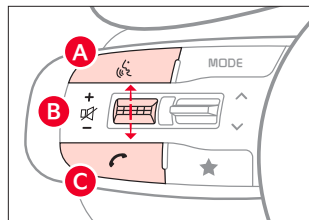

(Buttons on left side of steering wheel)

Pairing a Phone

For instructions on how to pair a phone, refer to the audio system's user's guide or your vehicle's Quick Start Guide.

QUICK TIP

During the pairing process, be sure to accept the connection requests on the phone for phone book download and to allow acceptance of all future Bluetooth® connection requests

How to Place a Call

When using the voice command feature, wait for the system beep before speaking the command.

There are two options for placing a call using the Steering Wheel controls:

- **Option 1:** Press the Receive/Place Call button **C** (system displays the call history with the most recent calls)
- **Option 2:** Press the Talk button **A** (system will BEEP to indicate it is ready for call placement). Then say the command "Call {name}" or "Dial {number}"

REMINDERS: Bluetooth® Wireless Technology audio and calling functions are supported when connected to a Bluetooth® enabled device.

For more information, refer to the Car Infotainment System Quick Reference Guide or the Owner's Manual.

Bluetooth® Wireless Technology^{†3,17} (continued)

Voice Recognition and Phone Contact Tips

The system may have difficulty understanding some accents or uncommon names. Improve the performance by making a few simple changes to your phone contacts, listed below. To help optimize the Bluetooth® Wireless Technology Voice Recognition system, see other tips and reminders under Quick Tips:

- Use full names (first and last names) vs. short or single-syllable names (“John Smith” vs. “Dad,” “Smith Residence” vs. “Home”)
- Avoid using special characters, emojis or hyphenated names (@, &, #, /, -, *, +, etc.)
- Avoid using acronyms (“In Case of Emergency” vs. “ICE”) or words with all capital letters
- Spell words completely, no abbreviations (“Doctor Smith” vs. “Dr. Smith”)

QUICK TIPS

- The system may register or pair multiple *Bluetooth*® devices. See the Car Infotainment System Quick Reference Guide for more information on setup and limitations
- *Bluetooth*® Music Streaming: If the *Bluetooth*® music is inaudible or too low, turn up the volume on the connected phone
- When placing a call, speak in a natural, moderate tone, with clear pronunciation. The system may have trouble recognizing commands if you speak too softly or too loudly
- Always wait for the beep before speaking any commands
- Close windows and sunroof and turn off A/C. The noise from an A/C fan operating at higher speeds or wind noise from open windows or sunroof can interfere with Voice Recognition
- Press the talk button and say “Help” to get a list of available commands

QR CODE

Voice Recognition Tips Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Android Auto™^{†3} / Apple CarPlay®^{†3} Setup

Android Auto™ compatible smartphone setup - Download the Android Auto™ app from the Google Play™ Store^{†10}. Open the Android Auto™ app and proceed with the onscreen instructions to complete setup on the mobile device.

Wireless Connection setup for Android Auto™ & Apple CarPlay® (Standard Audio System):

1. Press the SETUP key on the audio head unit
2. Press DEVICE CONNECTION SETTINGS
3. Press PHONE PROJECTION, then ADD NEW

Cable Connection setup for Android Auto™ (Standard Audio System & Kia Connect with Smart Navigation):

1. Press the SETUP key on the audio head unit
2. Press DEVICE CONNECTION, select Android Auto™ and then select ENABLE ANDROID AUTO. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Android Auto™
3. Connect the Android™ device with the vehicle's USB port using the manufacturer's cable provided with your phone
4. From the vehicle's home screen, select the Android Auto™ button, where you'll see all the Android Auto™ supported apps

QUICK TIPS

- If Android Auto™ / Apple CarPlay® randomly disconnects:
 - Ensure the USB cable is certified by the phone manufacturer for both power and data
 - Clean the phone's port, which the USB cable connects to, as instructed by the phone's manufacturer
 - The Phone should not be disturbed while driving as this can cause a disconnection at the phone's USB port
 - Visit the phone manufacturer's website for Android Auto™ / Apple CarPlay® app concerns

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

Cable Connection setup for Apple CarPlay® (Kia Connect with Smart Navigation only):

1. Connect the Apple CarPlay® compatible iPhone®^{†11} with the vehicle's USB port using the manufacturer's cable provided with your iPhone®^{†11}
2. Press the SETUP key on the audio head unit
3. Press DEVICE CONNECTION on the screen and select Apple CarPlay®
4. Select ENABLE APPLE CARPLAY. Review all terms, conditions and requests on the head unit and phone, and, if you agree, accept them in order to use Apple CarPlay®
5. From the audio head unit home screen, select the Apple CarPlay® button, where you'll see all the Apple CarPlay® supported apps

REMINDERS:

- Android Auto™ compatibility requirements for connection:
 - Kia Connect with Smart Navigation (USB cable connection only): OS Android™ 5.0 or higher, phone manufacturer's USB cable and data plan for applicable feature(s)
 - Standard Audio System-Value (USB cable & wireless connection):
 - USB cable connection - OS Android™ 5.0 or higher, phone manufacturer's USB cable and data plan for applicable feature(s)
 - Wireless connection - OS Android™ 9.0 or higher with data plan for applicable feature(s)
- Apple CarPlay® compatibility requirements for connection:
 - Kia Connect with Smart Navigation (USB cable connection only): iOS software 8.0 or higher, phone manufacturer's USB cable and data plan for applicable feature(s)
 - Standard Audio System-Value (Wireless connection only): iOS software 10.0 and higher with data plan for applicable feature(s)
- It is recommended to always update your phone to the latest operating system release
- Wireless Android Auto™ system only works for certain Android models. Use the manufacturer's USB cable when wireless feature is not available

QR CODE

 
Wireless Apple CarPlay® & Android Auto Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to the Car Infotainment System Quick Reference Guide for more information.

Standard Audio System* — FM/AM/Media (USB, Bluetooth® Audio)*

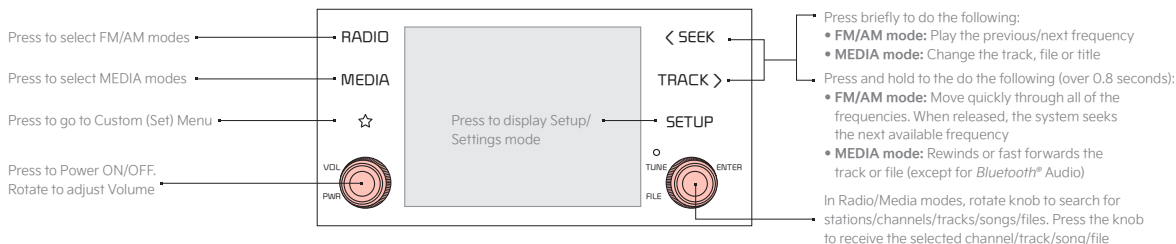

Sound Settings - To adjust the sound settings:

1. Press the SETUP key on the audio control unit or the onscreen MENU button, when in MEDIA mode
2. Select the onscreen SOUND button
3. Select the menu item (Position, Volume, Tone, Priority, Advanced)
4. Using the touchscreen, press arrows to adjust the settings

SiriusXM® Smart Favorites - In Radio mode, choose SiriusXM®, then select any of the first ten favorites, and during song or program play, tap the Skip Backward icon to start from the

beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

Radio Presets - To Save a Preset, press and hold the desired slot. This saves the current station in the selected slot.

Custom Key ☆ - To program the Custom Key, press the SETUP button, then press the Custom Key ☆. Select one of the available features you would like the Custom Key to open.

Software updates - To keep your software up to date, free of charge, visit the official Kia update webpage at <https://update.kia.com>. **Note**, visiting a dealer for software update may include an additional charge.

QUICK TIPS

- Volume level between different audio modes:
 - When switching between audio modes (AM, FM, Bluetooth® Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to Bluetooth® Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
 - When using Bluetooth® Audio, the overall volume is dependent on your device's volume. If the volume is turned down low on your device it will remain low even if the system volume is turned up
- When connected to Android Auto™ or Apple CarPlay® on your smartphone, the device's navigation system may also be available
- A warning screen may appear periodically to remind users that the audio system should be operated when the engine is running to prevent battery discharge
- Prolonged use of the audio control unit in ACC mode may drain the vehicle's battery

QR CODE

Standard Audio System Video



Standard Audio System Updates Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

REMINDERS: To help minimize driver distraction, some audio system functionalities have been modified while the vehicle is in Drive, Reverse or moved out of Park.

Your vehicle's audio system may differ from that in the illustration. For further audio system operation, refer to pages 31-38. For more information, refer to the Car Infotainment System Quick Reference Guide.

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

Kia Connect Activation**†1

Follow these steps to activate your Kia Connect system:

1. Enter the activation screen on your vehicle's head unit:
 - a. Press SETUP key
 - b. Press Kia Connect icon
 - c. Press Activate Kia Connect
2. Read and agree to Terms of Service and Privacy Policy and press SUBMIT
3. Enter number or email address to receive a verification code, then press SUBMIT
4. Follow these steps to receive your verification code using your phone SMS or email:
 - a. Check your phone SMS or email for verification code
 - b. Open the link in your SMS or email. A page will open requesting that you create your account

Note: If you already have a Kia Owners Portal account using the email or phone number as your login ID, you will need to provide your password prior to receiving the verification code

 - c. Enter your first name, last name, email, phone number, an account password, and click CREATE ACCOUNT. A page will open displaying your verification code
 - d. Enter the code in the head unit and press ACTIVATE
 - e. Go back to the page with your verification code and press "I have entered my verification code." A link will be provided to download the Kia Access app from your app store. After installing the app, log in and enjoy

REMINDER: This vehicle is equipped with over-the-air system updates. Or you download map updates for the navigation system. Go to update.kia.com. Check for updates that are generally available twice a year.


For further Kia Connect information, refer to the Car Infotainment System Quick Reference Guide. For other audio system information, refer to pages 31-38.

Kia Connect is currently unavailable for model year 2022 and later vehicles sold or purchased in Massachusetts. See Kia Connect Terms of Service at owners.kia.com for more information on its availability.

 
Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

Kia Connect Assistance**†1

Virtual Assistant ⓘ ⓘ - Press to connect to a virtual assistant to hear information about the Kia Connect features

Kia Connect  ⓘ - Connect to the Kia Connect Call Center

Roadside Assist ⚠️ ⓘ - Press to connect to a Roadside Assistant where you can request vehicle towing services

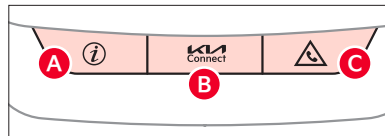

(Buttons on overhead lamp console*)

REMINDER: These buttons may be located in the rearview mirror or the overhead console.

For more information, refer to the Car Infotainment System Quick Reference Guide. On certain models, Kia Connect Assistance buttons are located on the Rearview Mirror.

QR CODE

Kia Connect Activation Video



Kia Connect & Kia Access App Video



Kia Connect Assistance Video



Refer to the inside front cover for more information on QR codes. www.youtube.com/KiaFeatureVideos

Kia Access App Download

Go to an app marketplace to download the new Kia Access App. Once you download, make sure you register your vehicle and set up an account (refer to Kia Connect Activation, page 36). Get to know your new Kia and the available convenient features on the app.

QUICK TIPS

- The smartphone and vehicle need to be connected to a cellular network with a good wireless signal strength in order to use Kia Connect. If these conditions are not met, voice commands may fail or take a long time to execute
- To use Remote Start or Remote Start with Climate Control feature, all doors, hood and trunk/liftgate must be closed and locked
- Activate Remote Start or Remote Start with Climate Control feature at least 10 minutes before getting into the vehicle, which will allow vehicle interior to reach a desired temperature. If the driver does not enter the vehicle within the 10 minutes, the Remote Start will turn off the engine
- The quickest way to obtain accurate vehicle status through the app is by pressing the refresh button on the app or refreshing the web page when using the customer web portal
- In order to preserve the vehicle battery, Kia Connect will not turn on seven days after the last ignition was on. You will need to restart the vehicle with a key fob in order to use Kia Connect again



Kia Access App Features Guide

The Kia Access App Features Guide is helping you utilize the app to its full potential by detailing each feature and how to adjust various settings. Below are some of the topics included:

- Remote Commands
- Set Climate
- Schedule Climate
- Schedule Charge
- Schedule Service
- Dealer Settings
- Manage Vehicles and Profiles

Kia Access App Screen for illustrative purposes only. Actual App screen and functionality may vary.

For further Kia Connect operations, refer to the Car Infotainment System Quick Reference Guide.

Kia Connect is currently unavailable for model year 2022 and later vehicles sold or purchased in Massachusetts. See Kia Connect Terms of Service at owners.kia.com for more information on its availability.

QR CODES

Download the Kia Access App by clicking this dynamic QR code. Some phone's operating systems may need to be updated to scan dynamic QR codes.



Kia Access App Features Guide. Click this dynamic QR code to access the guide. Some phone's operating systems may need to be updated to scan dynamic QR codes.



Kia Connect^{†1} with Smart Navigation^{*†9} — FM/AM/SiriusXM^{®†16}/Media (USB, Bluetooth[®] Audio)

Press briefly to do the following:

 
- **FM/AM mode:** Play the previous/next frequency
- **SiriusXM[™] mode:** Change the channel
- **MEDIA mode:** Change the track, file or title

Press and hold to do the following (over 0.8 seconds):

- **FM/AM mode:** Move quickly through all of the frequencies. When released, the system seeks the next available frequency
- **MEDIA mode:** Rewinds or fast forwards the track or file (except for Bluetooth[®] Audio)

Press to Power ON/OFF. Rotate to adjust Volume

Press to display the MAP screen for the current position mode

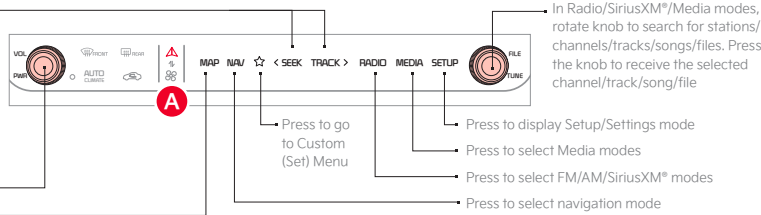

Infotainment System / Climate Control mode switching button **A**

Press to toggle between Infotainment System and Climate Control Modes. Press and hold the Climate Control button to set the default button display mode

To adjust the sound settings (Position, Volume Tone, Priority, Navigation Volume, Advanced, Default, Beep) from any audio mode:

1. Press the SETUP key on the audio control unit or the onscreen SETUP button
2. Select the onscreen SOUND button. Select the menu item to change settings
3. Use the onscreen buttons to adjust settings

Radio Presets: To save a preset, press and hold the desired slot. This saves the current station in the selected slot

SiriusXM[™] Smart Favorites: In Radio mode, choose SiriusXM[™], then select any of the first ten favorites, and during song or program play, tap the Skip Backward icon to start from the beginning of the song or program. Tap the Play Live icon to return to the live broadcast.

Custom Key - To program the Custom Key to one of the available features, press and hold the SETUP button, then press the Custom Key . Select one of the available features you would like the Custom Key to open.

Map/software updates - To keep your map and software up to date, Kia provides over-the-air updates, free of charge. You can also visit the official Kia update webpage at <https://update.kia.com>. **Note**, visiting a dealer for software update may include an additional charge.

QUICK TIPS

- The system can register or pair multiple Bluetooth[®] devices
- Volume level between different audio modes:
 - When switching between audio modes (AM, FM, Bluetooth[®] Audio, etc.), the audio system saves the previous volume level you were listening to. For example, if you were listening to FM radio at volume level 20 then switched to Bluetooth[®] Audio and adjusted the volume level to 30, the volume level will be at 20 when you switch back to FM radio
 - When using Bluetooth[®] Audio, the overall volume is dependent on your device's volume. If the volume is turned down low on your device it will remain low even if the system volume is turned up
- Prolonged use of the audio system in ACC mode may drain the vehicle's battery
- A warning screen may appear periodically to remind users that the navigation system should be operated when the engine is running to prevent battery discharge

QR CODE

Kia Connect with Smart Navigation Videos



Navigation System Updates Video



Refer to the inside front cover for more information on QR codes. www.youtube.com/KiaFeatureVideos

Your vehicle's audio system may differ from that in the illustration. For more information, refer to the Car Infotainment System Quick Reference Guide.

Kia Connect is currently unavailable for model year 2022 and later vehicles sold or purchased in Massachusetts. See Kia Connect Terms of Service at owners.kia.com for more information on its availability.

 
Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

Multimedia USB Port, Power Outlets & USB Charger Port

Power Outlets **A:** Use the power outlets for mobile phones and other devices designed to operate on a 12V (180W max) power outlet.

Multimedia USB Port **B:** Use Multimedia USB port to connect USB audio devices and smartphones.

USB-C Charger Port **C:** Devices can be recharged using a USB-C cable. The Engine Start/Stop button needs to be in the ACC/ON/START position to operate the USB-C Charger Port.

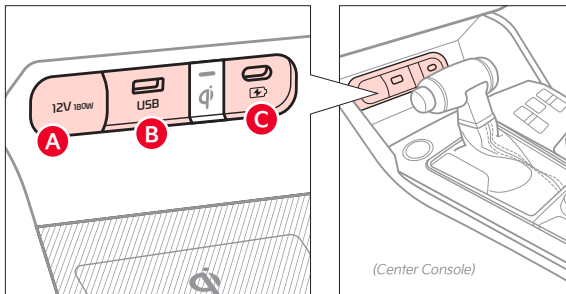

QUICK TIPS

- The power outlets are inactive when ignition is in the OFF position
- The Multimedia USB data port is located next to the Power Outlets. The USB Charger Port does not support data transfer
- The Multimedia USB Port in the center panel charges slower than the USB Charger Ports throughout the vehicle

REMINDERS:

- Using the power outlets and the USB ports for prolonged periods of time with the Engine Start/Stop button in the ACC position (Engine OFF) could cause the battery to discharge
- Kia recommends that you only use USB cables made by your device's manufacturer. Third-party USB cables may cause damage to your device

For more information on the Aux/USB Ports and Power Outlets, refer to section 4 in the Owner's Manual.

Digital Clock

Press the SETUP key on the audio head unit, then select General. Press the onscreen Date/Time button to enter the clock settings. Then use the onscreen buttons to navigate through setup and return to exit.

QUICK TIPS

- When needed, Daylight Savings must be enabled in the Clock Settings screen
- To access manual date and time setting, turn GPS time OFF in the Clock Settings (Kia Connect with Smart Navigation*)

For more information, refer to the Car Infotainment System Quick Reference Guide.

QR CODE

Multimedia USB Port, Power Outlets & USB Charger Port Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

 
 
Wireless Smartphone Charging System*

Charge a compatible smartphone wirelessly by placing it on the charging pad **A** at the front of the console, near the Multimedia USB ports and the charging indicator, while the ignition is on.

1. Enable Wireless Charging in the User Settings* in the Instrument Cluster LCD or the Vehicle Settings* in the infotainment system, select Convenience then Wireless Charging System
2. All doors must be closed
3. Place a compatible smartphone on the center of the charging pad
4. Indicator light **B** may change to amber once wireless charging begins
5. Once charging is complete, the amber light may change to green

QUICK TIPS

- For wireless charging to occur, all doors (excluding rear hatch) must be closed and the Smart Key Fob must be detected inside the vehicle
- For best results, place smart-phone on the center of the charging pad
- If wireless charging does not work, move smartphone around the pad until the charging indicator turns amber.
- Avoid placing other metal items in the bin while charging as to not impede the charging area

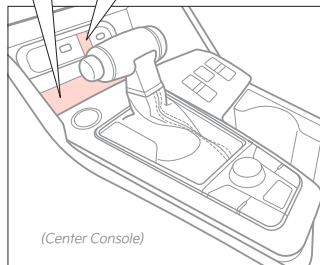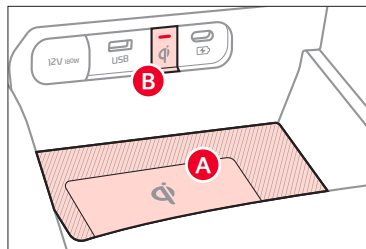

(Center Console)

QR CODE

Wireless Smartphone Charging Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

REMINDERS:

- The smartphone must be a compatible phone with Qi function available; Some smartphone models are not Qi certified, which may effect the speed or performance of the wireless charging
- Avoid placing other metal items in the bin while charging as to not impede the charging area
- This vehicle is equipped with wireless charging technology which allows for a device to be charged using inductive charging; however, device compatibility varies
- Inductive charging systems are less efficient than conventional charging through cable. As a result, higher device operating temperatures may be experienced during use
- **Charging Performance:** Your device's position on the wireless charging system can affect charging performance. Other factors that may affect the charging rate include foreign objects, such as coins or pens, and phone case thickness
- If driver door is opened, charging will be disabled

Automatic Gear Shift with Sportmatic® Shifting (Manual Mode)^{†3}

 
P: Park **[+]:** Manual Mode Upshift
R: Reverse **[-]:** Manual Mode Downshift

N: Neutral

D: Drive

Manual Mode:

To enter Manual mode, move shift lever from **D** to left gate **A**.
 To shift while in Manual mode, move shift lever up **[+]** to upshift or down **[-]** to downshift **A**.

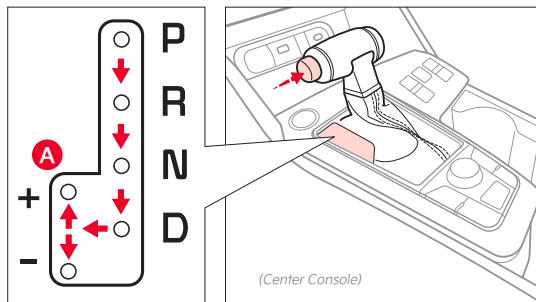

(Center Console)

QUICK TIPS

- Press brake pedal and depress release button to move gear shift from N to P, N to R or from P to any gear
- Manual mode downshifts are made automatically when the vehicle slows down. When the vehicle stops, 1st gear is automatically selected

REMINDERS:

- When in P (Park), if the Release button is not pressed while shifting, the transmission does not shift
- If going through a car wash, remind the attendant to keep the vehicle in Neutral (N) and keep the engine running. Also, disable the power liftgate lid control, turn off the auto rain sensing wipers and fold in the mirrors

QR CODE

 
Sportmatic® Shifting Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to section 5 in the Owner's Manual for more information.

Automatic Climate Control*

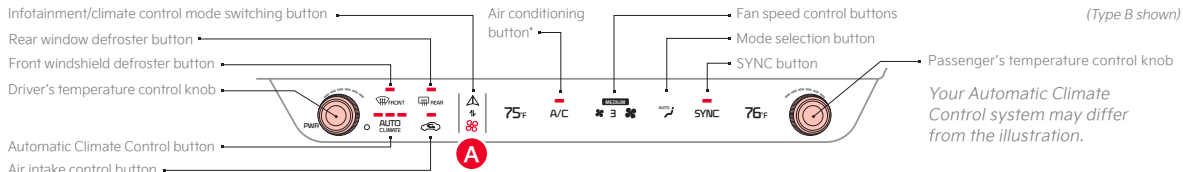

Infotainment System / Climate Control mode switching button **A**

Press to toggle between Infotainment System and Climate Control Modes

Climate Control Auto Function

1. Press AUTO to select Full Auto Operation - The Auto setting automatically controls the airflow modes, fan speeds, air intake and air conditioning according to the temperature setting selected and the ambient condition
2. Set desired Temperature
3. Press SYNC to sync the left and right temperature control

Defrost Outside Windshield:

1. Set Temperature to Hot
2. Press the Front Defrost button

Defog Inside Windshield:

1. Set Fan Speed to highest position
2. Set Temperature to highest position
3. Press the Front Defrost button

Air Flow Modes

To select Air Flow Modes, press the mode selection button to cycle to the desired mode:



Auto Defogging System (ADS):

Auto defogging is designed to reduce the fogging up of the inside of the windshield by automatically sensing the moisture of the inside of the windshield. The system will automatically change to defrost mode when needed.

Auto Defogging is set ON by default and will operate when the Climate Control system is ON. To cancel Auto Defogging, press the Front Defrost button for three seconds, when the ignition is in on (ADS OFF icon will illuminate). To turn Auto Defogging on again, press the Front Defrost button for three seconds.

QUICK TIPS

- Defrost mode activates A/C and opens Fresh Air vent to help dehumidify the air and improve Defroster performance
- During Auto Operation, the A/C indicator may NOT illuminate. The fan speed, air intake, air flow and air conditioning may automatically be engaged at any time to reach desired temperature and reduce humidity
- Keep inside glass as clean as possible to reduce window fogging

REMINDERS:

- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility
- When in AUTO mode, Air Flow mode and Fan Speed do not display on the Climate Control Display
- Cold or warm ambient air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)
- Pressing any button during AUTO operation will deactivate the AUTO function and switch to manual mode, except for Temperature Control or SYNC Temperature Control

QR CODE

Automatic Climate Control: Touch-Sensitive Control Panel Video



 
Auto Defogging System (ADS) Video




Refer to the inside front cover for more information on QR codes. www.youtube.com/KiaFeatureVideos

Refer to section 4 in the Owner's Manual for more information.


Manual Climate Control*

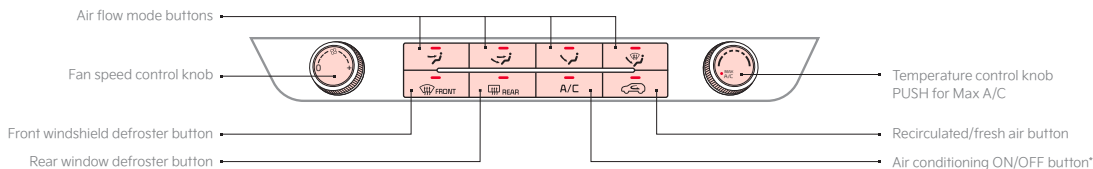


Defrost Outside Windshield:

1. Set Fan Speed to the highest position
2. Set Temperature to Hot
3. Press the Front Defrost button 

Defog Inside Windshield:

1. Set Fan Speed to desired position
2. Set Temperature to desired position
3. Press the Front Defrost button 

QUICK TIPS

- Set the mode to the desired position. To defrost  mode activates A/C and opens Fresh Air vent to help dehumidify the air and improve Defroster performance
- MAX A/C mode automatically engages Recirculated Air
- Keep inside glass as clean as possible to reduce window fogging

REMINDERS:

- Continuous use of the climate control system in the recirculated air position may allow humidity to increase inside the vehicle which may fog the glass and obscure visibility
- Warm air may flow in through vents if Recirculated Air button is not pressed ON (LED lit)

Your Manual Climate Control system may differ from those in the illustrations. See section 4 in the Owner's Manual for more details.

Air Flow Modes

To select Air Flow modes, press the Mode selection buttons:

-  Face-Level
-  Bi-Level
-  Floor-Level
-  Floor/Defrost-Level

Electronic Parking Brake (EPB)*

The Electronic Parking Brake (EPB) system utilizes an electric motor to engage the parking brake.

Applying the Parking Brake

Depress the brake pedal and pull up the EPB switch **A**. Ensure that the indicator light is illuminated on the instrument cluster.

If parked on a steep incline/decline, pull up the EPB switch for more than 3 seconds for a firmer EPB application.

Releasing the Parking Brake

The EPB will automatically release when the brake pedal is engaged and shifter is shifted out of P (Park) to R (Reverse) or shifted out of N (Neutral) to Reverse or D (Drive). To release EPB manually, depress the brake pedal, then press the EPB switch **A**, with the ignition switch in the ON position. Ensure that the indicator light is OFF.

QUICK TIPS

- When leaving your keys with parking lot attendants or valet, make sure to inform them how to operate the EPB
- Pull up and hold EPB switch a second time to increase brake pressure if parked on a decline or incline
- If parked on a steep incline, pull up the EPB switch for more than 3 seconds for a firmer EPB application

REMINDERS:

- As a bulb check, the EPB malfunction indicator will illuminate for approximately 3 seconds when the ignition switch is turned ON
- If the warning light does not illuminate temporarily, or continues to remain lit, take your vehicle to an authorized Kia dealer and have the system checked
- The EPB should not be operated while the vehicle is moving
- A click or electric brake motor sound may be heard while operating or releasing the EPB, but these conditions are normal and indicate that the EPB is functioning properly

Refer to section 5 in the Owner's Manual for more information.

Auto Hold*

Auto Hold temporarily maintains the vehicle at a standstill even though the brake pedal is not depressed after the driver brings the vehicle to a complete stop by depressing the brake pedal. Auto Hold can be turned On/Off using the AUTO HOLD button **B** on the center panel below the gear shift. Before Auto Hold will operate, the driver's door, engine hood, and liftgate must be closed.

 
 
 
 
The Auto Hold indicator on the Instrument Cluster has four states:

White: Standby - With vehicle at a standstill and AUTO HOLD button **B** pressed ON, the indicator will illuminate white. While driving the vehicle (vehicle is not at a standstill), the Auto Hold indicator will remain white.

Green: Engaged - When coming to a complete stop by depressing the brake pedal, the Auto Hold indicator changes from white to green.

Off (not illuminated) - The indicator will turn off when the AUTO HOLD button **B** is manually pressed off.

Yellow: Malfunction - When the indicator is illuminated yellow, there may be a system malfunction. Take your vehicle to a local Kia dealer.

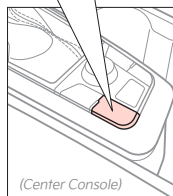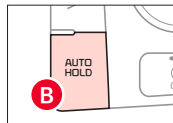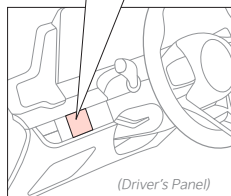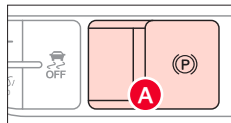

REMINDERS:

- To reduce the risk of an accident, do not activate Auto Hold while driving downhill, backing up or parking your vehicle
- Do not solely rely on the Auto Hold system to keep the vehicle stopped. Always pay attention to traffic and road conditions, and be prepared to depress the brakes

Refer to page 4 for location of Instrument Cluster indicators.

Refer to section 5 in the Owner's Manual for more information.

QR CODE

Electric Parking Brake (EPB) / Auto Hold Video

 


Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Downhill Brake Control (DBC)^{†6}

DBC helps drivers maneuver down steep hills by automatically applying braking inputs, allowing drivers to concentrate on steering.

Press button **A** to turn DBC ON/OFF.

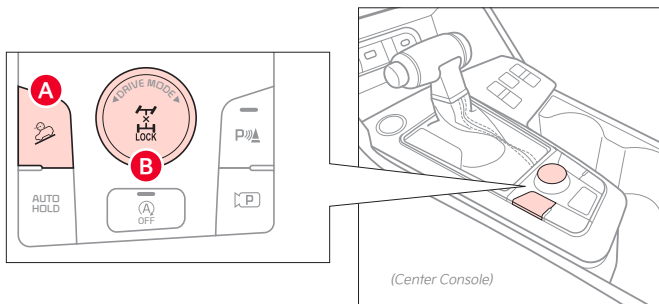

QUICK TIPS


- When on, DBC will turn OFF when button is pressed again or vehicle speed is over 38 mph
- If the red indicator illuminates, the DBC system may have malfunctioned. Take your vehicle to an authorized Kia dealer and have the system checked

REMINDER: DBC defaults to OFF when ignition is cycled.

The DBC system is a supplemental system and does not replace the need for the driver to apply the brakes. Pay attention to road and traffic conditions and be prepared to depress the brakes.

Refer to section 5 in the Owner's Manual for more information.

AWD (All-Wheel Drive) Lock*

When you select AWD LOCK mode  (indicator is illuminated) by pressing the AWD LOCK button **B**, the AWD LOCK mode increases the drive power when driving on wet pavement, snow-covered roads and/or on unpaved roads.

- This mode is used for climbing or descending sharp grades, driving on unpaved roads, driving on sandy and muddy roads, etc., to improve traction
- This mode automatically begins to deactivate at speeds above 38 mph and is shifted to AWD AUTO mode at speeds above 38 mph. If the vehicle decelerates to speeds below approximately 38 mph, however, the transfer mode is shifted into AWD LOCK mode again

When the AWD LOCK mode is deactivated, a shock may be felt as the drive power is delivered entirely to the front wheels. This shock is not a mechanical failure.

QR CODE

All Wheel Drive System and AWD Lock Video



*Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos*

The AWD system is a supplemental system only. It is the driver's responsibility to drive carefully depending on road and traffic conditions.

Refer to section 5 in the Owner's Manual for more information.

 
Seat Warmers / Ventilated Seats*†15

A Seat Warmers:

- Press button once for high setting (3 LEDs lit)
- Press button twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF

B Ventilated Seats:

- Press button once for high setting (3 LEDs lit)
- Press button twice for medium setting (2 LEDs lit)
- Press a third time for low setting (1 LED lit) and again to turn OFF

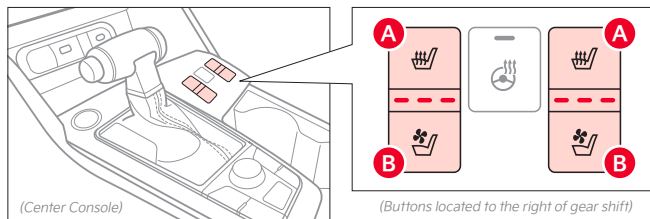

QUICK TIPS

- System is OFF by default. To turn system ON, press the seat warmer switch
- With the seat warmer switch in the ON position, the heating system in the seat turns off or on automatically depending on the seat temperature
- When the Climate Control System's temperature is turned up to high heat, the Seat Warmers turn on automatically

REMINDER: Use extreme caution when using the seat warmers to avoid burns.

Refer to section 4 in the Owner's Manual for more information.

Rear Occupant Alert (ROA) with Door Monitoring†11

 
Rear Occupant Alert (ROA) with Door Monitoring can help alert the driver when a rear passenger may be left in the vehicle. The alert will be a message on the Instrument Cluster LCD stating to "Check rear seats" **C** and an alert will sound.

The factory default is set to OFF. To turn the system ON or OFF, go to Vehicle Settings on the Infotainment System, by selecting VEHICLE, then select Convenience, then Rear Occupant Alert and check/uncheck the box.

REMINDERS:

- Always be sure to check the passenger areas before leaving the vehicle
- ROA uses a rear door opened/closed history, which is reset after the driver turns the vehicle off, exits the vehicle and locks the door remotely. So even if a rear door does not reopen, Rear Occupant Alert (ROA) alert can occur

When engaged, Rear Occupant Alert is not a substitute for one's attention and may not detect all movement within the vehicle. Always check the vehicle interior when exiting the vehicle.

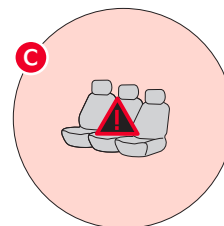

(Message on Cluster Display)

See section 5 in the Owner's Manual for more information.

QR CODE

Seat Warmers/Ventilated Seats Video



 
 
Rear Occupant Alert (ROA) with Door Monitoring video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Power Adjustable Driver's Seat**†13

Move/Press controls to adjust Seat forward/backward, Seat Cushion height, Seatback recline or Lumbar* forward/backward.

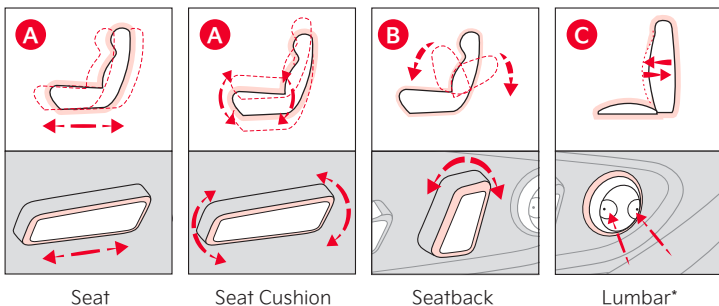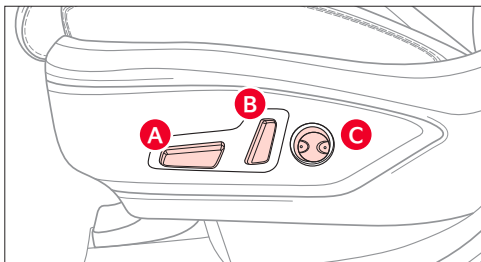


Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

For illustrative purposes only. Your actual display, buttons and/or features may vary.

Refer to section 3 in the Owner's Manual for more information.

6-Way Manual Adjustable Driver's Seat**†13

 - Pull lever **D** to slide seat forward/backward.
- Pull lever **E** up several times to raise Seat Height.
- Push lever **E** down several times to lower Seat Height.
- Pull lever **F** to adjust seatback recline.
- Press **G** to adjust lumbar support.

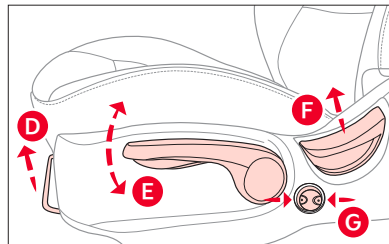

QUICK TIPS

When adjusting seat forward or backward, ensure seat clicks or locks into place before driving vehicle.

Do not attempt to adjust the seat while the vehicle is moving. This could result in loss of control of the vehicle.

For more information on 6-Way Manual Adjustable Driver's Seat operation, refer to section 3 in the Owner's Manual.

QR CODE

Power Adjustable Driver's Seat with Memory Settings Video



Manual Adjustable Driver's Seat Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Reclining/Folding Rear Seats^{†13} (Seat type with lever in front)

 
To recline the Rear Seatback:

1. Pull lever **A** up to unlock seat
2. Holding the lever **A** up, adjust Seatback to desired position **B**
3. Release the lever **A** and ensure the Seatback is locked in place

QUICK TIPS

When adjusting seat forward or backward, ensure seat clicks or locks into place before driving the vehicle.

Refer to section 3 in the Owner's Manual for more information.

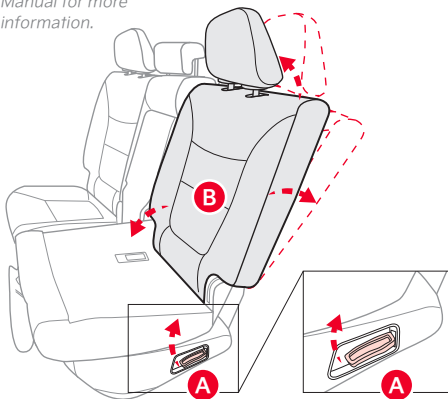

For illustrative purposes only. Your actual display, buttons and/or features may vary.

 
REMINDER: The lever must return to its original position for the Seatback to lock.

To fold the Rear Seatback:

1. Set the front seatback in the most upright position and if needed, slide the seat forward.
2. Lower the headrest to the lowest position
3. Insert the rear seat belt buckle into the pocket between the rear seatback and cushion. Insert the seatbelt webbing in the guide
4. Lift seatback folding lever **A** up to unlock seat
5. Fold Seatback flat

Unfastening Center Seat Belt

1. If Seat Belt is buckled, press the release button on the buckle
2. To retract the 2nd-Row Center Seatbelt **C** into the headliner, press the "release button" on the buckle by inserting the seat belt tongue plate **D** in the small slot on the center buckle **E**

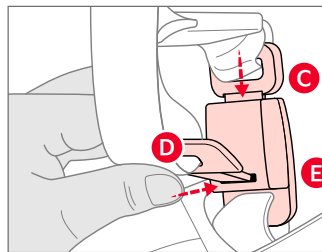

Refer to section 3 in the Owner's Manual for more information.

QR CODE

2nd-Row Seats Video



Unfastening Center Seat Belt Video

 


Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Front Seat Headrest Adjustment^{†8}

To raise headrest — Pull headrest up to the desired position.

To lower headrest — Press lock **F**, then press the headrest down.

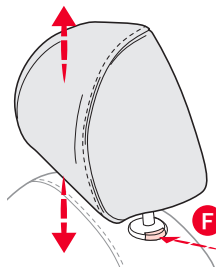

QUICK TIPS

For easy adjustments, hold a headrest post with one hand while using the other hand to pull the headrest from underneath.

REMINDEES:

- The headrest only moves up and down as described above. It does not adjust forward or backward
- Do not operate the vehicle with the headrests removed. Headrests can provide critical neck and head support in an accident
- Button may be hard to see if headrest is in its lowest position

 
Refer to section 3 in the Owner's Manual for more information.

Smart Key with Remote Start*

- A** Press to lock All Doors
- B** Press to unlock Driver's Door. Press twice in 4 seconds to unlock All Doors and Liftgate
- C Power Liftgate***: Press and hold for Power Liftgate to open automatically. Press again at any time to stop. Press and hold again to automatically close
- Manual Liftgate***: Press and hold to unlock the Liftgate and then manually open
- D** Press and hold for more than a half-second for Panic Alarm. To turn off Alarm, press any button
- E** Press to release Mechanical Key **F**
- J Remote Start***: Lock the doors by pressing the door lock button **A** within 32 feet distance from the vehicle. Within four (4) seconds of pressing the door lock button **A**, press and hold the Remote Start button **J** for more than two (2) seconds to start the vehicle. To stop the Remote Start operation, press the button again. If driver does enter vehicle within ten minutes of starting the vehicle, the engine will automatically turn off

Driver's Door Lock/Unlock button **G**:

- Press button once to unlock Driver's Door
- Press again within 4 seconds to unlock All Doors
- Press again to lock All Doors

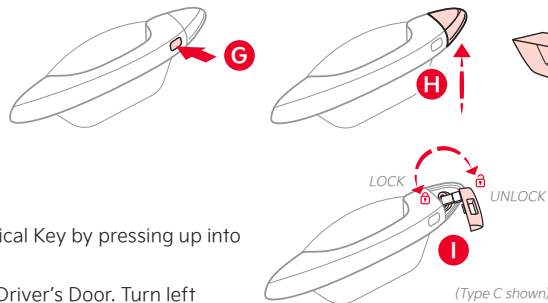Mechanical Key **F**:

1. Pull out door handle
2. Remove door handle keyhole cover with Mechanical Key by pressing up into slot as shown **H**
3. Insert Mechanical Key **I** and turn left to unlock Driver's Door. Turn left twice within 4 seconds to unlock all doors
4. Insert Mechanical Key and turn right to lock Driver's Door to lock all doors
5. Return keyhole cover to its original position

Use to turn Child-Protector Rear Door Lock.

QUICK TIPS

- If the Smart Key battery is weak or not working properly, hold the Smart Key fob up to the Engine Start/Stop button (Lock button side closest) and press to start engine
- The Smart Key's signal can be blocked by the normal operation of a cell or smartphone. To help prevent this, store each device separately
- When reinserting the mechanical key into the fob, make sure it is pushed all the way in until there is a click sound

QR CODE

Smart Key with Remote Start / Remote Smart Parking Assist (RSPA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Remote button configuration may vary depending on vehicle options. For more information on the Mechanical Key, please refer to section 4 in the Owner's Manual.

 
Remote Keyless Entry (Folding Key)*

- A** Press the release button to unfold the key
- B** Press to lock all doors
- C** Press to unlock driver's door. Press twice in 4 seconds to unlock all doors and Liftgate
- D** Press and hold to unlock the liftgate and then manually open
- E** Press and hold more than 0.5 seconds (half a second) for Panic Alarm. To turn OFF Alarm, press any button

REMINDERS:


- The Liftgate does not automatically open when the button **D** is pressed
- Remote button configuration may vary depending on vehicle options
- The Liftgate unlocks when the Smart Key fob is within close proximity of the Liftgate

Refer to section 4 in the Owner's Manual for more information.

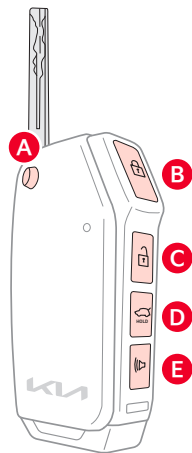

Double-Turn Lock/Unlock All

 - Turn clockwise once to unlock driver's door
- Turn clockwise again within 4 seconds to unlock all doors
- Turn counterclockwise once to lock all doors

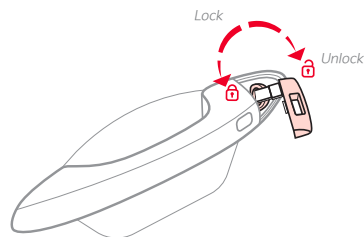

QR CODE

Kia Smart & Folding Key Fobs Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Refer to section 4 in the Owner's Manual for more information.

 
Fuel Cap / Malfunction Indicator (Check Engine Light)

Tighten for ONE CLICK to prevent Malfunction Indicator  from illuminating.

REMINDERS:

- To open the fuel door, press the right edge of the fuel door
- It is normal operation when tightening to hear one click, and then when Fuel Cap is released, it clicks back

Refer to section 4 in the Owner's Manual for more information.

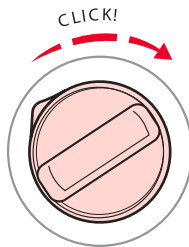


Fuel Filler Lid Release

To open the Fuel Filler lid:

1. When all doors are unlocked, press the right center edge of the Fuel Filler lid **A**
2. Pull the Fuel Filler lid out to fully open **B**

 To open the Fuel Cap, turn it counterclockwise **C**

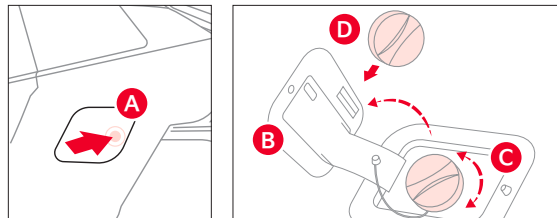

QUICK TIP

Place the Fuel Cap on the inside of the Fuel Filler Lid when fueling **D**

REMINDERS:

- The fuel filler lid will unlock when Driver's door is unlocked
- To unlock fuel filler lid:
 - Press the unlock button on your smart key
 - Press the Central Door unlock button on armrest trim of driver's door
 - Pull the driver's inside door handle outward
 - The fuel filler lid will lock when all doors are locked
- To lock fuel filler lid:
 - Press the lock button on your smart key
 - Press the Central Door lock button on armrest trim of driver's door
 - All doors and fuel filler lid will automatically lock after the vehicle speed exceeds 9 mph

Refer to section 4 in the Owner's Manual for more information.

QR CODE

Kia Fuel Cap Video



Fuel Filler Lid Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

 
HomeLink® with Auto-Dimming Rearview Mirror*†3

The HomeLink® Universal Transceiver is designed to connect to your garage door opener, electric gate, home lighting, etc. The Auto-Dimming Rearview Mirror is designed to help reduce glare coming from a vehicle's headlights in the rear. HomeLink® with Auto-Dimming Rearview Mirror can connect to three electronic transmitters.

REMINDER: Mirror indicator light will illuminate when automatic dimming is ON.

Programming a New HomeLink® Button:

1. Press and release the HomeLink® Channel button **A**, **B** or **C**, you would like to program. The HomeLink® User Interface Indicator **G** will flash orange slowly (If it doesn't, go to the steps of "Erasing HomeLink® Buttons" section on next page, and start over)
2. Position the garage-door opener remote 1-3 inches away from the HomeLink® buttons
3. While the HomeLink® User Interface Indicator **G** is flashing orange, press and hold the garage-door opener remote button until the HomeLink® User Interface Indicator **G** changes from orange to green
4. Wait until your garage door comes to a complete stop, regardless of position, before proceeding to the next step
5. Press and release the HomeLink® Channel button **A**, **B** or **C** that you're programming. If the HomeLink® User Interface Indicator **G** is solid green, HomeLink® is connected and should operate when the HomeLink® Channel button **A**, **B** or **C** is pressed. If your device operates, programming is complete
 - If the indicator light rapidly flashes green, firmly press, and hold the HomeLink® Channel button **A**, **B** or **C** slowly, for two seconds up to three times in a row, to complete the programming process. Do not press the HomeLink® Channel button rapidly. If your device now operates, programming is complete
 - If the device does not operate, continue with step 6
6. At the garage door opener motor, (security gate motor, etc.) locate the "Learn", "Smart", "Set" or "Program" button. This can usually be found where the hanging antenna wire is attached to the motor-head unit (see the device's manual to identify this button). The name and color of the button may vary by manufacturer. A ladder and/or second person may simplify the following steps
7. Firmly press and release the "Learn", "Smart", "Set" or "Program" button. You now have up to 30 seconds to complete the next step
8. Return to the vehicle and firmly press and hold the HomeLink® button slowly, for two seconds, up to three times in a row. Do not press the HomeLink® button rapidly. As soon as you see the garage door start to move, stop pressing any buttons until a few seconds after the garage door has come to a complete stop, regardless of position. At this point programming is complete and your device should operate when the HomeLink® Channel button is pressed

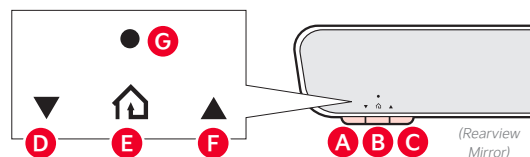

- A** HomeLink® button
- B** HomeLink® button
- C** HomeLink® button
- D** Garage Door Opener Status Indicator: Closing or Closed
- E** HomeLink Operation Indicator
- F** Garage Door Opener Status Indicator: Opening or Opened
- G** HomeLink User Interface Indicator

For illustrative purposes only. Your actual display, buttons and/or features may vary.

HomeLink® with Auto-Dimming Rearview Mirror*†3 (continued)

Operating HomeLink®

Press and release the desired programmed HomeLink® Channel button **A**, **B** or **C**. The HomeLink® User Interface Indicator **G** should light green, solid or flashing, and your programmed device should operate. If your device does not operate, the HomeLink® programming was not successful, and you'll need to reprogram the button(s).

QUICK TIPS

- If your garage door opener has the "myQ"†19 logo on its side, it has two-way communication capability to display "Closing" or "Opening" status message on Homelink® mirror. Refer to section 4 in the Owner's Manual on how to set this up or for more information.
- When programming, park outside of the garage door
- The Start/Stop button needs to be in the accessory (ACC) position
- Replace the hand-held garage door transmitter for quicker and accurate programming

Erasing a Programmed Button:

1. Press and hold the desired HomeLink® Channel button **A**, **B** or **C** you want to re-program. DO NOT release the button
2. The HomeLink® User Interface Indicator **G** will illuminate solid green. Release the button as soon as the HomeLink® User Interface Indicator **G** begins to flash orange, usually about 20 seconds
3. Proceed with the steps in the "Programming a New HomeLink® Button" section

QUICK TIP

For information on how to erase all programmed buttons at the same time, refer to section 4 of the Owner's Manual.

REMINDERS:

- Erasing programmed buttons will delete all trained transmitters
- A ladder may be needed to access the garage door opener
- A second person may be needed to help
- Some of the steps are time sensitive

QR CODE

Homelink® Support Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

For more information, go to HomeLink.com or call (800) 355-3515.

See section 4 in the Owner's Manual for more information.

Power Liftgate*†11

Opening from Outside the Vehicle:

To open Power Liftgate automatically, press the Rear Hatch Release button **A** on exterior of the Liftgate.

Automatically close by pressing the Power Liftgate Close button **B**.

Opening from Inside the Vehicle:

Open: Press and briefly hold the Power Liftgate Open/Close button **C** to automatically close the Liftgate.

Close: Press and hold the button **C** until liftgate is completely closed. If the button **C** is released while closing, the power liftgate will stop and a warning chime will sound.

Smart Key:

To open the Power Liftgate, press and hold the Liftgate button **D** until the Liftgate begins opening. Press and hold to close, and until the liftgate is closed completely. If button is released while closing, the liftgate will stop and a chime will sound.

REMINDERS:

- Pulling the Rear Hatch upward by the handle or pressing the button a second time will interrupt the automatic opening of the Power Liftgate
- When closing, be mindful of any objects or persons

Power Liftgate Opening Height Adjustment

 
 
 
Set the opening height in Vehicle Settings*. Press the SETUP key/button on the infotainment system, select VEHICLE, DOOR, then POWER LIFTGATE OPENING HEIGHT. Select the desired option.

To manually set the opening height, do the following steps:

1. Position the liftgate manually to the preferred height
2. Press and hold Power Liftgate Close button **B** more than 3 seconds
3. A system beep will sound twice indicating the height setting has been saved

The liftgate will then open to the set height. To change setting again, repeat steps 1-3.

REMINDER: Ensure objects and people are out of the way when operating the power liftgate.

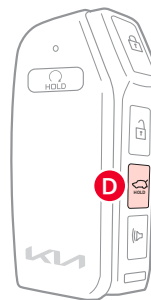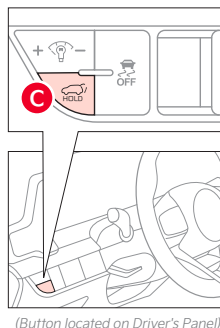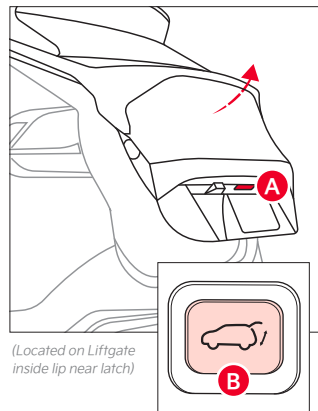

QR CODE

Power Liftgate, Key Fob & Opening Height/Speed Adjustment



Smart Key with Remote Start / Remote Smart Parking Assist (RSPA) Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Smart Power Liftgate*†11

When the Smart Key fob is on your person and you are near the back of the vehicle, within close proximity, the hazard lights will blink and a chime will sound for about 3 seconds as an alert that the Smart Power Liftgate is about to open. Then the alert system will blink and chime two additional times before opening the Smart Power Liftgate.

The Smart Power Liftgate feature is off by default. To enable the Smart Power Liftgate, go to Vehicle Settings* in the Infotainment System. Press the SETUP key or onscreen button, then VEHICLE. Select DOOR, then SMART LIFTGATE

QUICK TIPS

- During the Smart Power Liftgate alert, the Smart Power Liftgate can be deactivated with the Smart Key by pressing any button on the key fob
- The open height can be adjusted. For information on how to set open height, see your Owner's Manual

REMINDERS:

 
- All doors are closed and locked after about 15 seconds for the system to operate
- The Smart Power Liftgate feature will not operate when:
 - The doors are recently closed and locked, and the Smart Key is still detected after 15 seconds near the vehicle or within 60 inches of the door handles
 - A door is not locked or closed
 - The Smart Key is in the vehicle
- Press any button on the Smart Key fob during the Detect and Alert stage to deactivate the Smart Power Liftgate function
- Ensure obstacles and people are out of the way of the liftgate

Manual Liftgate* / Liftgate Release Button

Located underneath the rear liftgate hatch. With liftgate unlocked, press the Liftgate Release Button **A** and pull the liftgate up by the handle to open.

QUICK TIPS

- The liftgate must be unlocked before it can be opened by the Liftgate Release Button
- The liftgate unlocks automatically and can then be opened, when the Smart Key fob* is within close proximity to the vehicle

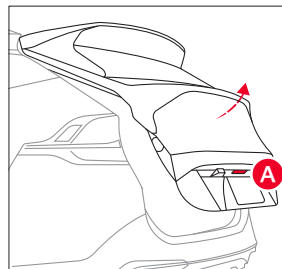

Refer to section 4 in the Owner's Manual for more information.

QR CODE

Smart Liftgate Operation, Opening Height/Speed Adjustment Video



Liftgate Buttons and Operation Video



Manual Liftgate & Key Fob Controls Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Map/Room Lamps

Automatic turn off function*

 
The interior lights automatically turn off approximately 30 seconds after the ignition or Engine Start/Stop button* is OFF.

Map/Room Lamp Operation

- Press lens **A** to turn the Driver's/Passenger's Map Lamps ON/OFF. This light produces a spot beam for convenient use as a map lamp or as a personal lamp for the driver or the front passenger.
- Press button **B** to turn all the Map/Room Lamps ON/OFF
- Press button **C** to turn the Map/Room Lamp ON, for 30 seconds, when a door is opened, unlocked from Smart Key or the ignition is turned OFF. When pressed and a door is opened, or doors are unlocked from the Smart Key, the Map and Room Lamps turn ON for approximately 30 seconds.

QUICK TIPS

- When doors are unlocked by the Smart Key, the lamp turns ON for approximately 30 seconds
- If your vehicle is equipped with the theft alarm system, the interior lights automatically turn off approximately 3 seconds after the system is in armed stage
- Using interior lights for an extended period of time may cause battery discharge

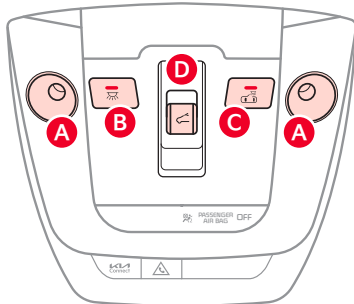

(Type B)

Refer to section 4 in the Owner's Manual for more information.

Panoramic Sunroof Operation with Power Sunshade*

The sunroof operation is controlled through a multidirectional switch. The ignition or Engine Start/Stop button* needs to be in the ON position to operate the sunroof.

To slide the power sunshade and sunroof:

- Auto Open: Slide the switch **D** backward to the farthest position and release
- Auto Close: Slide the switch **D** forward to the farthest position and release

To slide the power sunshade only:

- Auto Open: Slide the switch **D** partially backward to the first detent position and release
- Auto Close: Slide the switch **D** partially forward to the first detent position and release

To slide the sunroof (with power sunshade open):

- Open: Slide the switch **D** backward to the first detent position and release
- Close: Slide the switch **D** forward to the first detent position and release to close sunroof glass only. Slide the lever backward to the farthest position and release to close sunroof glass and sunshade

To tilt the sunroof:

- Raise: Push switch **D** upward
- Lower: Push switch **D** forward

REMINDERS:

- If the ignition is turned off with the Sunroof not fully closed, the Instrument Cluster LCD will display a warning message and a chime will sound for a few seconds
- Power sunshade needs to remain OPEN while sunroof is open
- Power sunshade cannot slide when the sunroof is in the tilt position or tilt while in an open or slide position
- Do not adjust the power sunroof or sunshade while driving. This could result in loss of control of the vehicle
- When closing, be mindful of any objects or persons

QR CODE

Sunroof Operation Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

 
Refer to section 4 in the Owner's Manual for more information.

QUICK TIP

To stop the sunroof/sunshade at any position, push or pull the sunroof control switch in any direction.

Sunvisor†18

Use the sunvisor to shield direct light through the front or side windows. Slide the sunvisor out and adjust as needed.

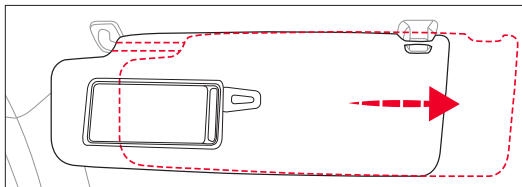

REMINDERS:

- Sunvisor may not shield all direct light
- The sunvisor may impair visibility if not adjusted properly
- Do not operate the vehicle if the sunvisor is impairing your visibility
- Be aware of seating position when adjusting or swinging sunvisor around to or from the front or side windows

Refer to section 4 in the Owner's Manual for more information.

 
Hood Release Lever and Latch

Opening the Hood:


1. Pull the Hood Release Lever **A** to unlatch the Hood
2. In the front of the vehicle, lift the Hood slightly, push the secondary Latch **B** to the left and lift the Hood

Closing the Hood:

Lower the Hood first to about 12 inches away from being closed. Then, press down to securely lock in place.

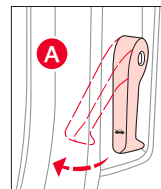

(Located on Driver's left knee bolster)

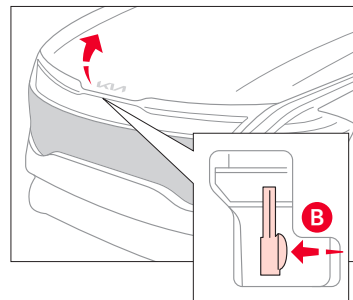 

REMINDERS:

- While lowering and closing, keep hands away from under the Hood
- Open the Hood only after turning the engine off, on a flat surface, with the gear shift in P (Park) position and setting the parking brake
- Make sure the hood is securely closed before driving

Refer to section 6 in the Owner's Manual for more information.

Tire Mobility Kit

The Tire Mobility Kit is designed to temporarily seal certain types of tire damage.

For operational information, please refer to the Owner's Manual.

- A** Sealant Bottle
- B** Compressor

 
QUICK TIPS

- The Tire Mobility Kit is a temporary fix and is to be used for one tire only; the tire should be inspected as soon as possible
- The kit should only be used for sealing/inflating passenger car tires; do not use for inflating any other type of tires
- Some damaged tires cannot be sealed completely; do not use the kit if it appears a tire is damaged beyond repair

REMINDERS:

- The Tire Mobility Kit requires the use of the 12V/15A/180W Power Outlet, which is located on the right side of the outlet port area
- After tire is properly sealed, drive cautiously at a maximum speed of 50 mph for no longer than a maximum distance of 120 miles

Refer to section 6 in the Owner's Manual for more information.

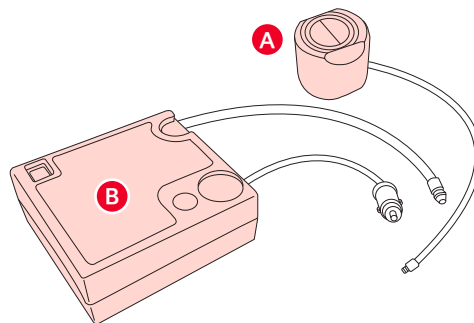

QR CODE

Tire Mobility Kit Video



 
Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

Seat Belts†2,14

To properly fasten your seat belts:

1. Insert the belt tongue plate **A** into the buckle **B** until it clicks
2. Position the lap portion of the belt across your lap as LOW ON THE HIPS as possible **C**. Adjust the belt to a SNUG FIT by pulling up on the shoulder portion **D**

REMINDER: For maximum protection, always wear your seat belt.

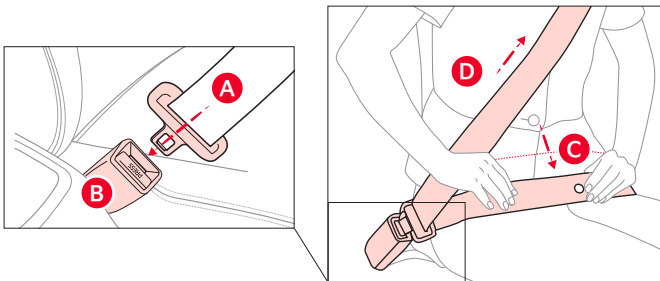

QUICK TIP

The Seat Belt warning chime operates for driver's seat only

Seat Belt Retractor Locks

Retractor locks allow lap/shoulder seat belts to remain unlocked during normal vehicle operation for freedom of movement and increased comfort.

During a STRONG STOP, SUDDEN TURN OR CERTAIN COLLISIONS, seat belt retractors will automatically lock the belts to reduce the risk of injury.

 
Refer to section 3 in the Owner's Manual for more information.

Child-Protector Rear Door Lock

Located on the rear edge of the rear passenger doors. Insert the ignition key into the hole and turn the key to the LOCK position to disable the inner door handles from opening the rear doors.

REMINDEERS:

- Child-Protector Rear Door Lock is located on rear passenger's door jamb
- To allow the door to be opened from inside the vehicle, unlock the Child-Protector Rear Door Lock
- To open the Rear Door, pull the outside door handle

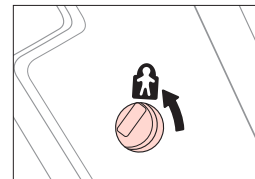

(Located on rear edge of rear passenger doors)

Refer to section 4 in the Owner's Manual for more information.

Occupant Detection System (ODS)†10 / Passenger Airbag Off Indicator†2

ODS is designed to detect the presence of the front passenger and turns off airbag deployment accordingly.

Depending on the situation and type of accident, the system may:

- Deploy airbag (Adult)
- Not deploy the airbag (Deactivated)
- If the system determines that the airbag should not be deployed, the "PASSENGER AIR BAG OFF" indicator will illuminate.



(Type B; overhead lamp console)

REMINDER: Do not allow an adult passenger to ride in the front seat when the Passenger Airbag Indicator is illuminated OFF because the airbag will not deploy in the event of a crash. The driver must instruct the passenger to reposition her/himself in the seat.

Refer to section 3 in the Owner's Manual for more information.

LEGAL DISCLAIMERS

Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, of any handheld devices, other equipment or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or that are not permissible by law should never be used during operation of the vehicle.

Safety Features: No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive responsibly.

- Kia Connect:** Purchase/lease of certain 2022 and newer Kia vehicles with Kia Connect includes a complimentary 1-year subscription starting from new vehicle retail sale/lease date as recorded by the dealer. After your complimentary 1-year Kia Connect subscription expires, continued access to the full suite of Kia Connect services available on your Kia will require a paid subscription at the then-current subscription rate or your use of certain Kia Connect features may immediately terminate. Use of Kia Connect is subject to agreement to the Kia Connect Privacy Policy (available at owners.kia.com/us/en/privacy-policy.html) and Terms of Service (available at owners.kia.com/us/en/terms-of-service.html). Complimentary Kia Connect subscription is transferable to subsequent owner during the original Kia Connect service term. Only use Kia Connect when safe to do so. Kia Connect may currently be unavailable for Model Year 2022 and newer vehicles sold or purchased in Massachusetts; please see the Kia Owners Portal for updates on availability. Kia Access app is available from the Apple® App Store® or Google Play Store™. Kia America, Inc. reserves the right to change or discontinue Kia Connect at any time without prior notification or incurring any future obligation. Message and data rates may apply. Cellular and GPS coverage is required to use most features. Kia Connect features may vary by model, model year, and trim level. Features, specifications, and fees are subject to change. For more on details and limitations, visit www.kia.com or your authorized Kia dealer. Apple® and App Store® are registered trademarks of Apple Inc. Google™ and its logos are trademarks of Google LLC.
- Airbags:** For maximum protection, always wear your seat belt.
- Android Auto™, Apple CarPlay®, Bluetooth® Wireless Technology, Google Play™ Store, iPhone, SiriusXM®, Sportmatic®, HomeLink®:** Fair Use of Trademark - The commentary reference to trademarked material is for educational purposes only and not an endorsement by or of the holder of the mark.
- Driver Assist Features - Forward/Reverse Parking Distance Warning, Blind-Spot Collision Warning, Rear Cross-Traffic Collision Warning, Lane Keeping Assist, Rear View Monitor, Forward Collision-Avoidance Assist, Smart Cruise Control:** These features are not substitutes for safe driving, and may not detect all objects surrounding vehicle. Always drive safely and use caution.
- Driver Attention Warning (DAW):** Driver Attention Warning is not a substitute for safe driving and may not detect all instances of inattentive driving practices. Failure to pay attention to travel conditions and vehicle operation could result in loss of vehicle control. Always drive safely and use caution.
- Electronic Stability Control (ESC)/Traction Control System (TCS)/Hill-start Assist Control (HAC), Downhill Brake Control (DBC):** No system, no matter how advanced, can compensate for all driver error and/or driving conditions. Always drive safely.
- Engine Start/Stop Button with Smart Key:** Always come to a complete stop before turning the engine on or off. However, if you have an emergency while the vehicle is in motion and must turn the engine off, you can turn the engine off to the ACC position by pressing the Start/Stop button for more than 3 seconds or 3 times in succession. If the vehicle is still moving, you can restart the engine by pressing the Start/Stop button with the shift lever in Neutral (N). With the engine off, power assist for steering and braking will be disabled, and the vehicle will be more difficult to control.
- Front Seat Headrest Adjustment:** Never attempt to adjust headrests when vehicle is in motion.
- Navigation:** Distracted driving can result in a loss of vehicle control. When operating a vehicle, never use a handheld device or vehicle system that takes your focus away from safe vehicle operation. Navigation is for information purposes only, and Kia does not make any warranties about the accuracy of the information.
- Occupant Detection System (ODS):** Kia vehicles use a number of different ODS types that vary by model.
- Power Liftgate / Smart Power Liftgate:** Driving with the trunk open may be unlawful and can draw dangerous exhaust fumes into your vehicle; if you choose to do so, keep air vents and all windows open for proper ventilation.
- Roadside Assist:** 24-hour Enhanced Roadside Assistance is a service plan provided by Kia Motors America, Inc. Certain limitations apply. Coverage details are available in the Kia Warranty and Consumer Information Manual. For access to Enhanced Roadside Assistance, a connected mobile phone via *Bluetooth®* within the cellular service coverage area is required.
- Seat adjustments:** Reclining the passenger seats can reduce the effectiveness of the safety restraint system and may lead to additional injury in an accident.
- Seat Belts / Airbags:** For maximum protection, always wear your seatbelt.
- Seat warmers:** Use extreme caution when using the seat warmers to avoid burns. Refer to the Owner's Manual for more information.
- SiriusXM™ :** SiriusXM™ Satellite Radio, SiriusXM™ Traffic and SiriusXM™ Travel Link each require a subscription sold separately, or as a package, by SiriusXM™ Radio Inc. If you decide to continue your service at the end of your trial subscription, the plan you choose will automatically renew and bill at then-current rates until you call 1-866-635-2349 to cancel. See SiriusXM™ Customer Agreement for complete terms at www.siriusxm.com. Other fees and taxes will apply. All fees and programming are subject to change. Not all vehicles or devices are capable of receiving all services offered by SiriusXM™. Data displays and individual product availability vary by vehicle hardware. Current information and features may not be available in all locations, or on all receivers. Weather Forecast, Current Conditions may not be available in all locations. Images above are for representative purposes only and are not real products. For actual features and images of real products, consult the vehicle manufacturer. SiriusXM™ is not responsible for any errors or inaccuracies in the data services or their use in the vehicle. Travel Link Stocks displays current price and daily delta of around 7,000 actively reported securities traded on the NYSE®, NASDAQ® and AMEX®. The service is delayed approximately 20 minutes. SiriusXM™ satellite service is available only to those at least 18 years of age in the 48 contiguous USA, DC, and Puerto Rico (with coverage limitations). SiriusXM™ Internet Radio service is available throughout our satellite service area and in AK and HI. ©2022 SiriusXM™ Radio Inc. Sirius, XM and all related marks and logos are trademarks of SiriusXM™ Radio Inc.
- Steering Wheel Controls:** Driving while distracted is dangerous and should be avoided. Remain attentive to driving and be cautious when using steering-wheel-mounted controls while driving.
- Sunvisors:** Sunvisor may not shield all direct light. Do not operate the vehicle if Sunvisor is impairing your visibility.
- The myQ logo is a registered trademark of The Chamberlain Group, Inc.



SPORTAGE CUSTOMER DELIVERY CHECKLIST

KEY FEATURE WALKTHROUGH

Demonstrate the following with the customer:

Android Auto™ / Apple CarPlay® Setup* - Page 34

Kia Connect Activation / Kia Connect Assistance* - Page 36

Kia Access App Download - page 37

Kia Access App Features Guide - page 37

For more information, refer to the Car Infotainment System Quick Reference Guide.

Standard Audio System - Page 35

For further operational information, refer to the Car Infotainment System Quick Reference Guide.



 
Kia Connect with Smart Navigation* - Page 38

For further operational information, refer to the Car Infotainment System Quick Reference Guide.




Smart Cruise Control - page 18

Demonstrate operation.

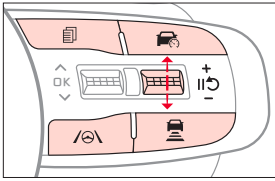


Cruise Control (CC) - page 19

 Demonstrate operation.

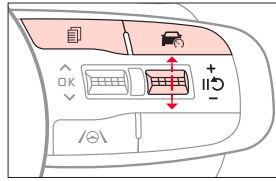

Bluetooth® Wireless Technology - page 32-33

 Demonstrate operation.

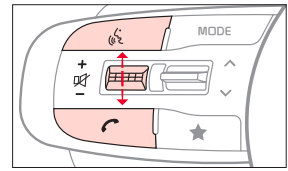

Forward*/Reverse Parking Distance Warning (PDW) - page 17

Digital Clock - page 39

Engine Start/Stop Button* - page 27

HomeLink® with Auto-Dimming Rearview Mirror* - page 52

Panoramic Sunroof with Power Sunshade* - page 53

Passenger Airbag Off Indicator - page 58

Rear View Monitor (RVM) - page 21

Reclining/Folding Rear Seats - page 48

Seat Warmers / Ventilated Seats* - page 46

Smart Key with Remote Start* - page 49

Sunvisor - page 56

Tire Pressure Monitoring System (TPMS) - page 5

Multimedia USB Port, Power Outlets & USB Charger Port - page 39

DURING DELIVERY

Explain first service process and schedule first service appointment

Tour Parts & Service departments, introduce staff and explain value of Kia Parts and Service

Review recommended maintenance schedule and maintenance requirements to validate warranty

Review business hours

Review the Kia 10-year/100,000-mile warranty program

Ensure 100% satisfaction with sales and delivery process and no problems with the vehicle

Confirm time and best contact number for initial dealer follow-up

*IF EQUIPPED

Sales Consultant: _____ Date: _____

Sales Manager: _____ Date: _____

Customer: _____ Date: _____



SPORTAGE CUSTOMER DELIVERY CHECKLIST

Owner's Name: _____ VIN: _____ Mileage: _____

Dealership Name: _____ Sales Consultant: _____ Date: _____

BEFORE DELIVERY

- Test and confirm "Good Battery" using a Kia battery tester and affix Results Label
- Verify all tire pressures are to spec (see driver's door label) LF _____ LR _____ RF _____ RR _____
- Verify proper operation of Remote Keyless Entry and Smart Key lock/unlock
- Ensure floor mats are snapped into place (if applicable)
- Verify vehicle is clean (interior and exterior), in good condition and free of chips and scratches
- Ensure all key documents are in the vehicle (Owner's Manual, Warranty and Consumer Information booklet, Tire Warranty booklet and Features & Functions Guide and any Audio System User's Manual)

KEY FEATURE WALKTHROUGH

 
- Air Conditioning / Climate Control - page 42-43
Demonstrate Air Flow Modes, Defog and Defrosting Windshield



- Wipers & Washers - page 29


To operate:

- Move lever Up/Down to change Wiper modes
- Rotate INT switch to adjust Intermittent Wipe Speed
- Pull lever to spray and wipe

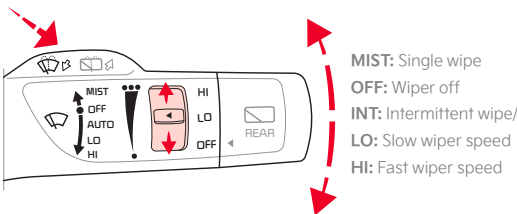

- Rear Wiper & Washer - page 29

 - Rotate Rear Wiper switch to change Wiper modes
- Push lever to spray and wipe

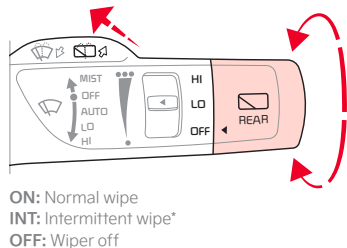



SPORTAGE NORMAL MAINTENANCE SCHEDULE

P=Perform R=Replace I=Inspect[†]

(up to 96,000 miles)[†]

MAINTENANCE ITEMS	MAINTENANCE INTERVALS (MILES)								
	8,000	16,000	24,000	32,000	40,000	48,000	56,000	64,000	
Rotate tires	P	P	P	P	P	P	P	P	P
Add fuel additive ^c	P	P	P	P	P	P	P	P	P
Engine Oil & Filter (Full synthetic)	R	R	R	R	R	R	R	R	R
Battery condition	I	I	I	I	I	I	I	I	I
Brake lines, hoses and connections	I	I	I	I	I	I	I	I	I
Disc brakes and pads	I	I	I	I	I	I	I	I	I
Vacuum hoses	I	I	I	I	I	I	I	I	I
Steering gear rack, linkage & boots	I	I	I	I	I	I	I	I	I
Suspension ball joints	I	I	I	I	I	I	I	I	I
Air conditioner compressor/refrigerant	I	I	I	I	I	I	I	I	I
Exhaust system	I	I	I	I	I	I	I	I	I
Brake fluid	I	I	I	I	I	R	I	I	I
Climate control air filter	I	R	I	R	I	R	I	R	I
Air cleaner filter (engine)	I	I	R	I	I	R	I	I	I
Drive shafts and boots		I		I		I		I	
Propeller shaft (AWD)		I		I		I		I	
Fuel tank air filter [‡]		I		I		I		I	
Parking brake		I		I		I		I	
Fuel filler cap and fuel tank		I		I		I		I	
Fuel lines, hoses and connections		I		I		I		I	
Cooling System				I		I		I	
Drive belts (engine) [¶]						I		I	
Transfer case oil (AWD) [¶]						I			
Differential Oil, rear/AWD						I			
Spark Plugs									

QR CODES

Kia Synthetic Oil Video



Refer to the inside front cover for more information on QR codes.
www.youtube.com/KiaFeatureVideos

QUICK TIP

Check your Maintenance Schedule or schedule an appointment with a dealer using Kia Connect on the infotainment system or your account by logging into your Kia Access App or your account on <https://owners.kia.com/> (Vehicles equipped with Kia Connect only) - See page 36 for setup information

- See the Owner's Manual for complete maintenance schedule. These are approximate estimated intervals. Refer to vehicle mileage for maintenance item schedule.
- And, if necessary, adjust, correct, clean or replace.
- If TOP TIER detergent gasoline is not available, one bottle of additive is recommended. Additives are available from your authorized Kia dealer along with information on how to use them. Do not mix other additives.
- The drive belt should be replaced when cracks occur or tension is reduced excessively.
- Both the fuel filter & fuel tank air filter are generally considered to be maintenance free, depending on fuel quality being used. However, periodic inspection is recommended. If your vehicle is having issues like fuel flow restriction, power surging, loss of power, difficulty starting, etc., replace the fuel filter immediately and consult an authorized Kia dealer for service.
- Transfer case oil should be changed anytime it has been submerged in water. See your Owner's Manual for more details and complete maintenance information, including severe maintenance schedule. Warranty may be voided if maintenance schedule is not followed.

[‡] If equipped [†]LEGAL DISCLAIMERS ON BACK INSIDE COVER